




ROOF SOLUTION

INSTALLATION INSTRUCTIONS

FOR STAINLESS STEEL HOOK#04

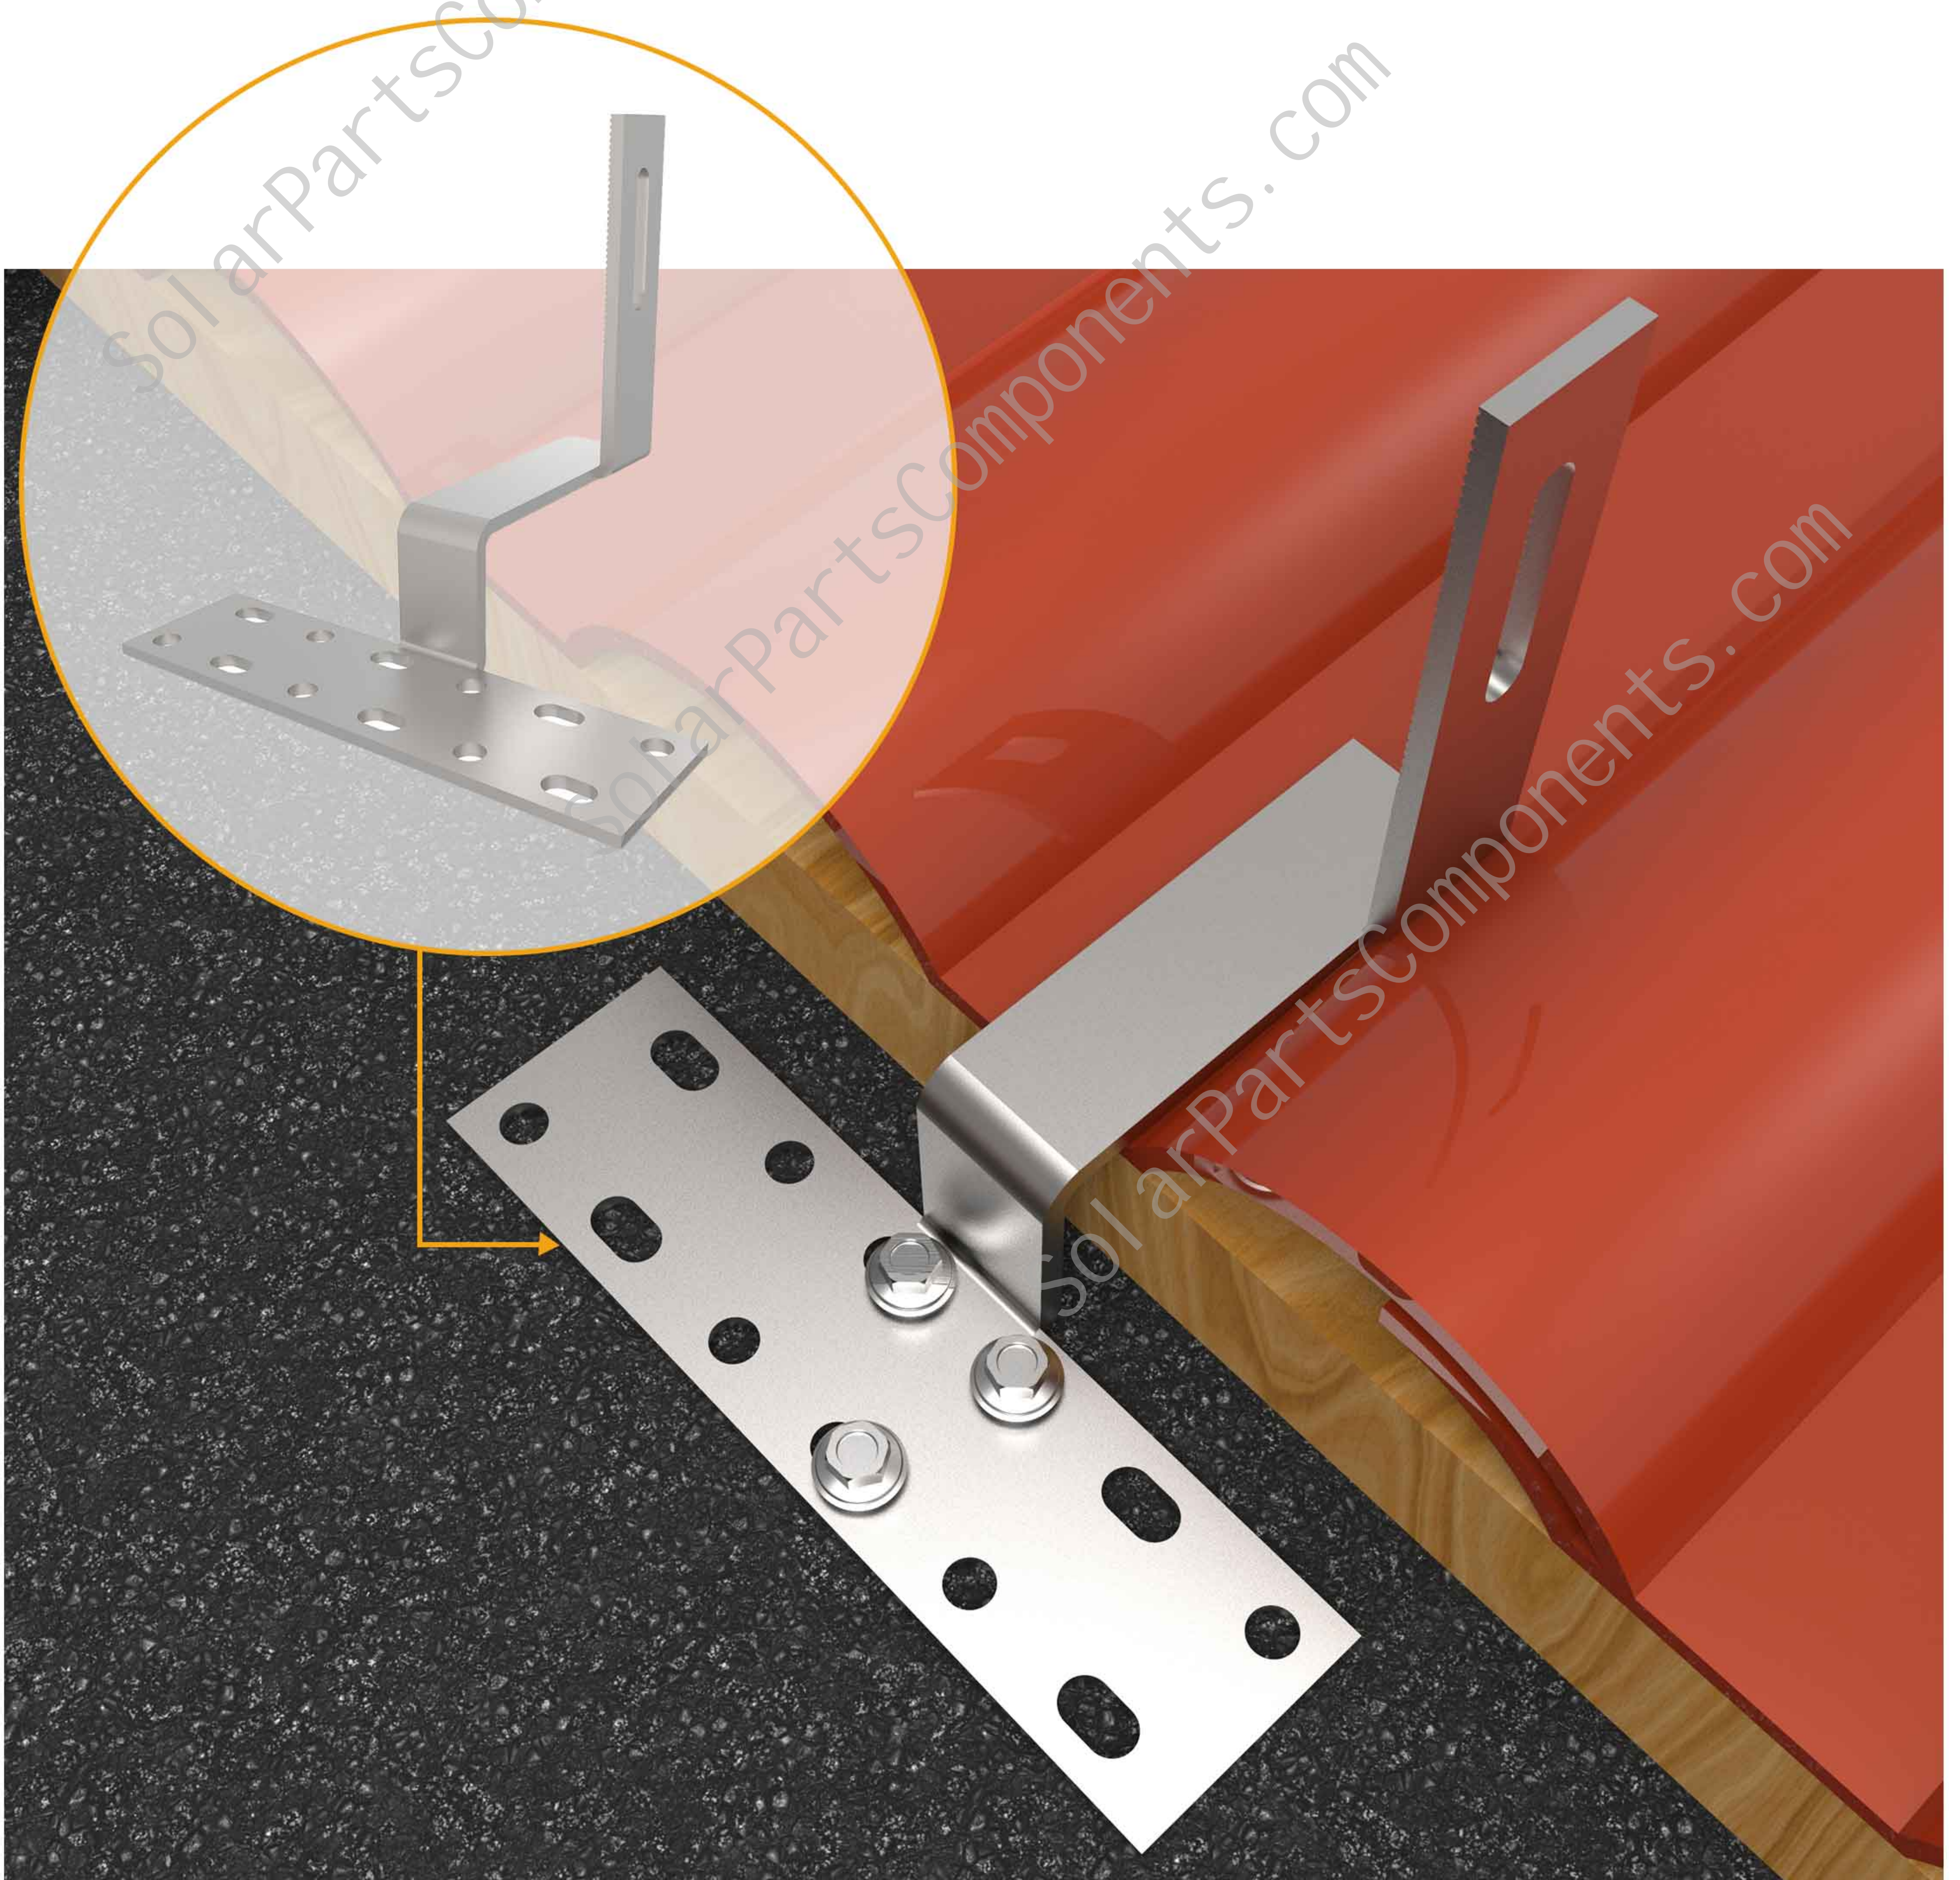


Installation instructions for stainless steel hook#04

Step one, open the Spanish tiles




Step two, find the position of the main beam of the roof and mark it with a line above the main beam.

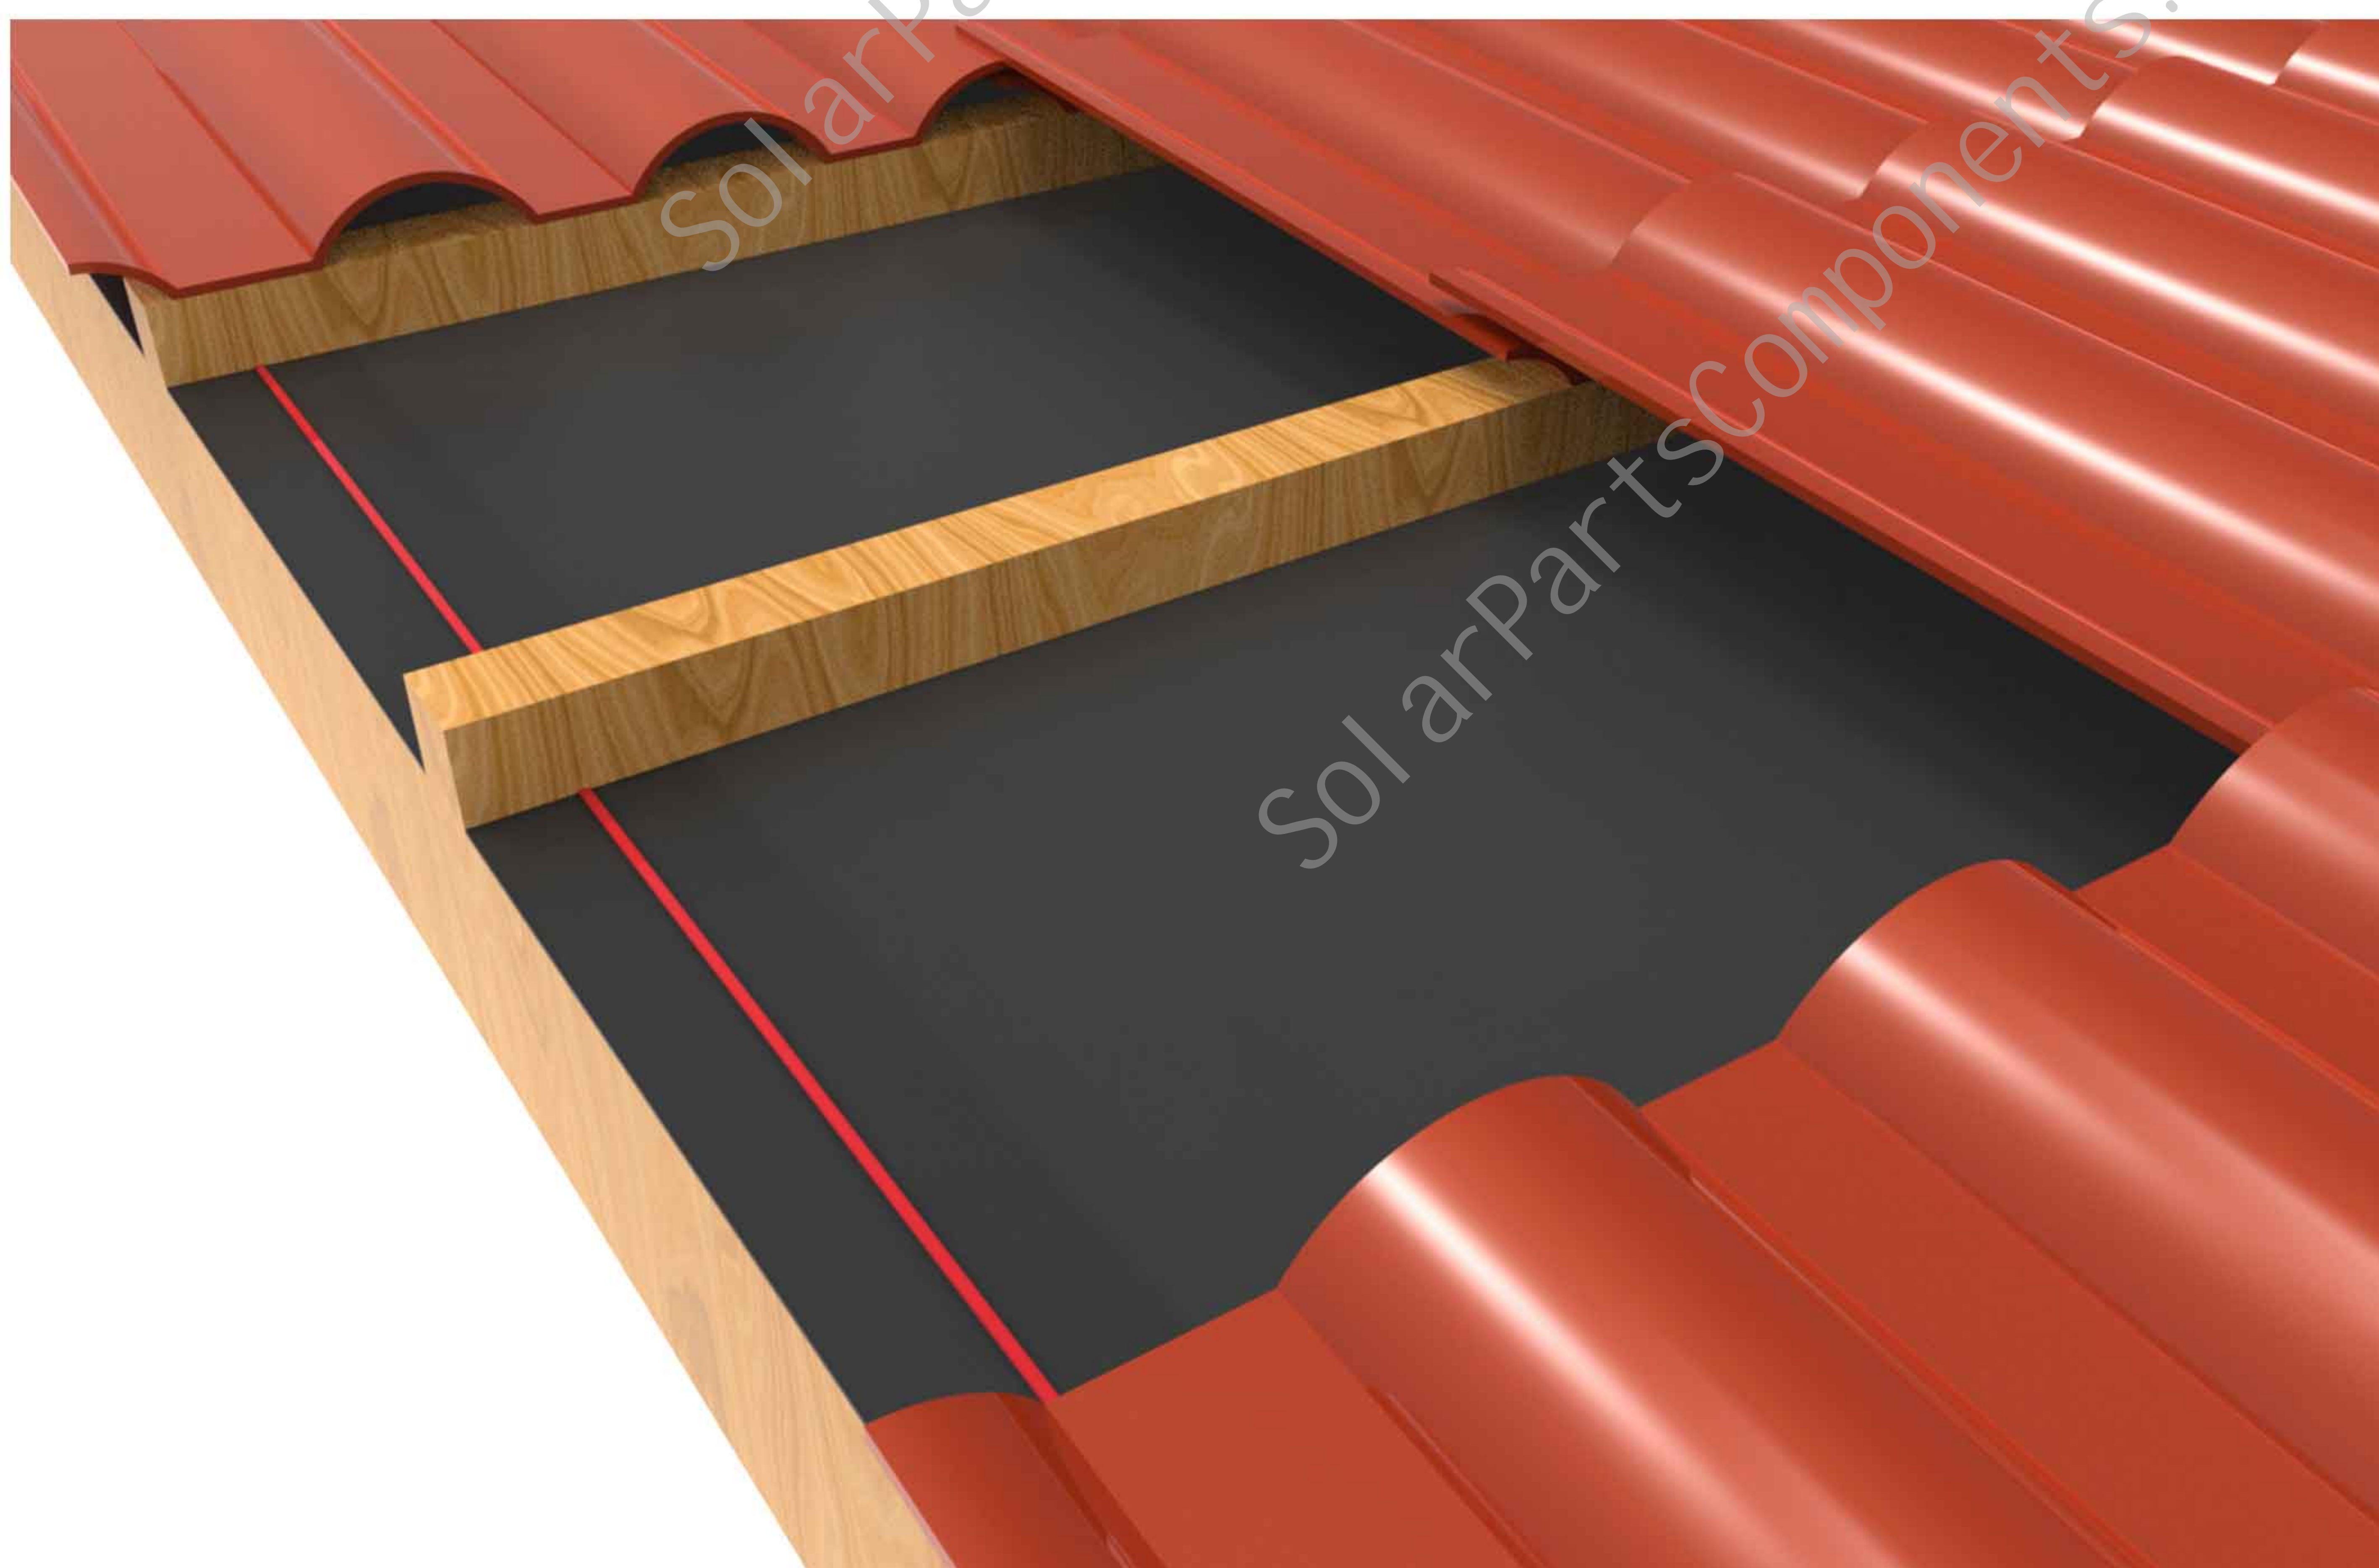


Step three, put the stainless-steel hook #04 on the installation position of the marking, and drill holes on the main beam with an electric drill according to the hole position on the hook, as picture 3 shows.



The effect after drilling as picture 4 shows.

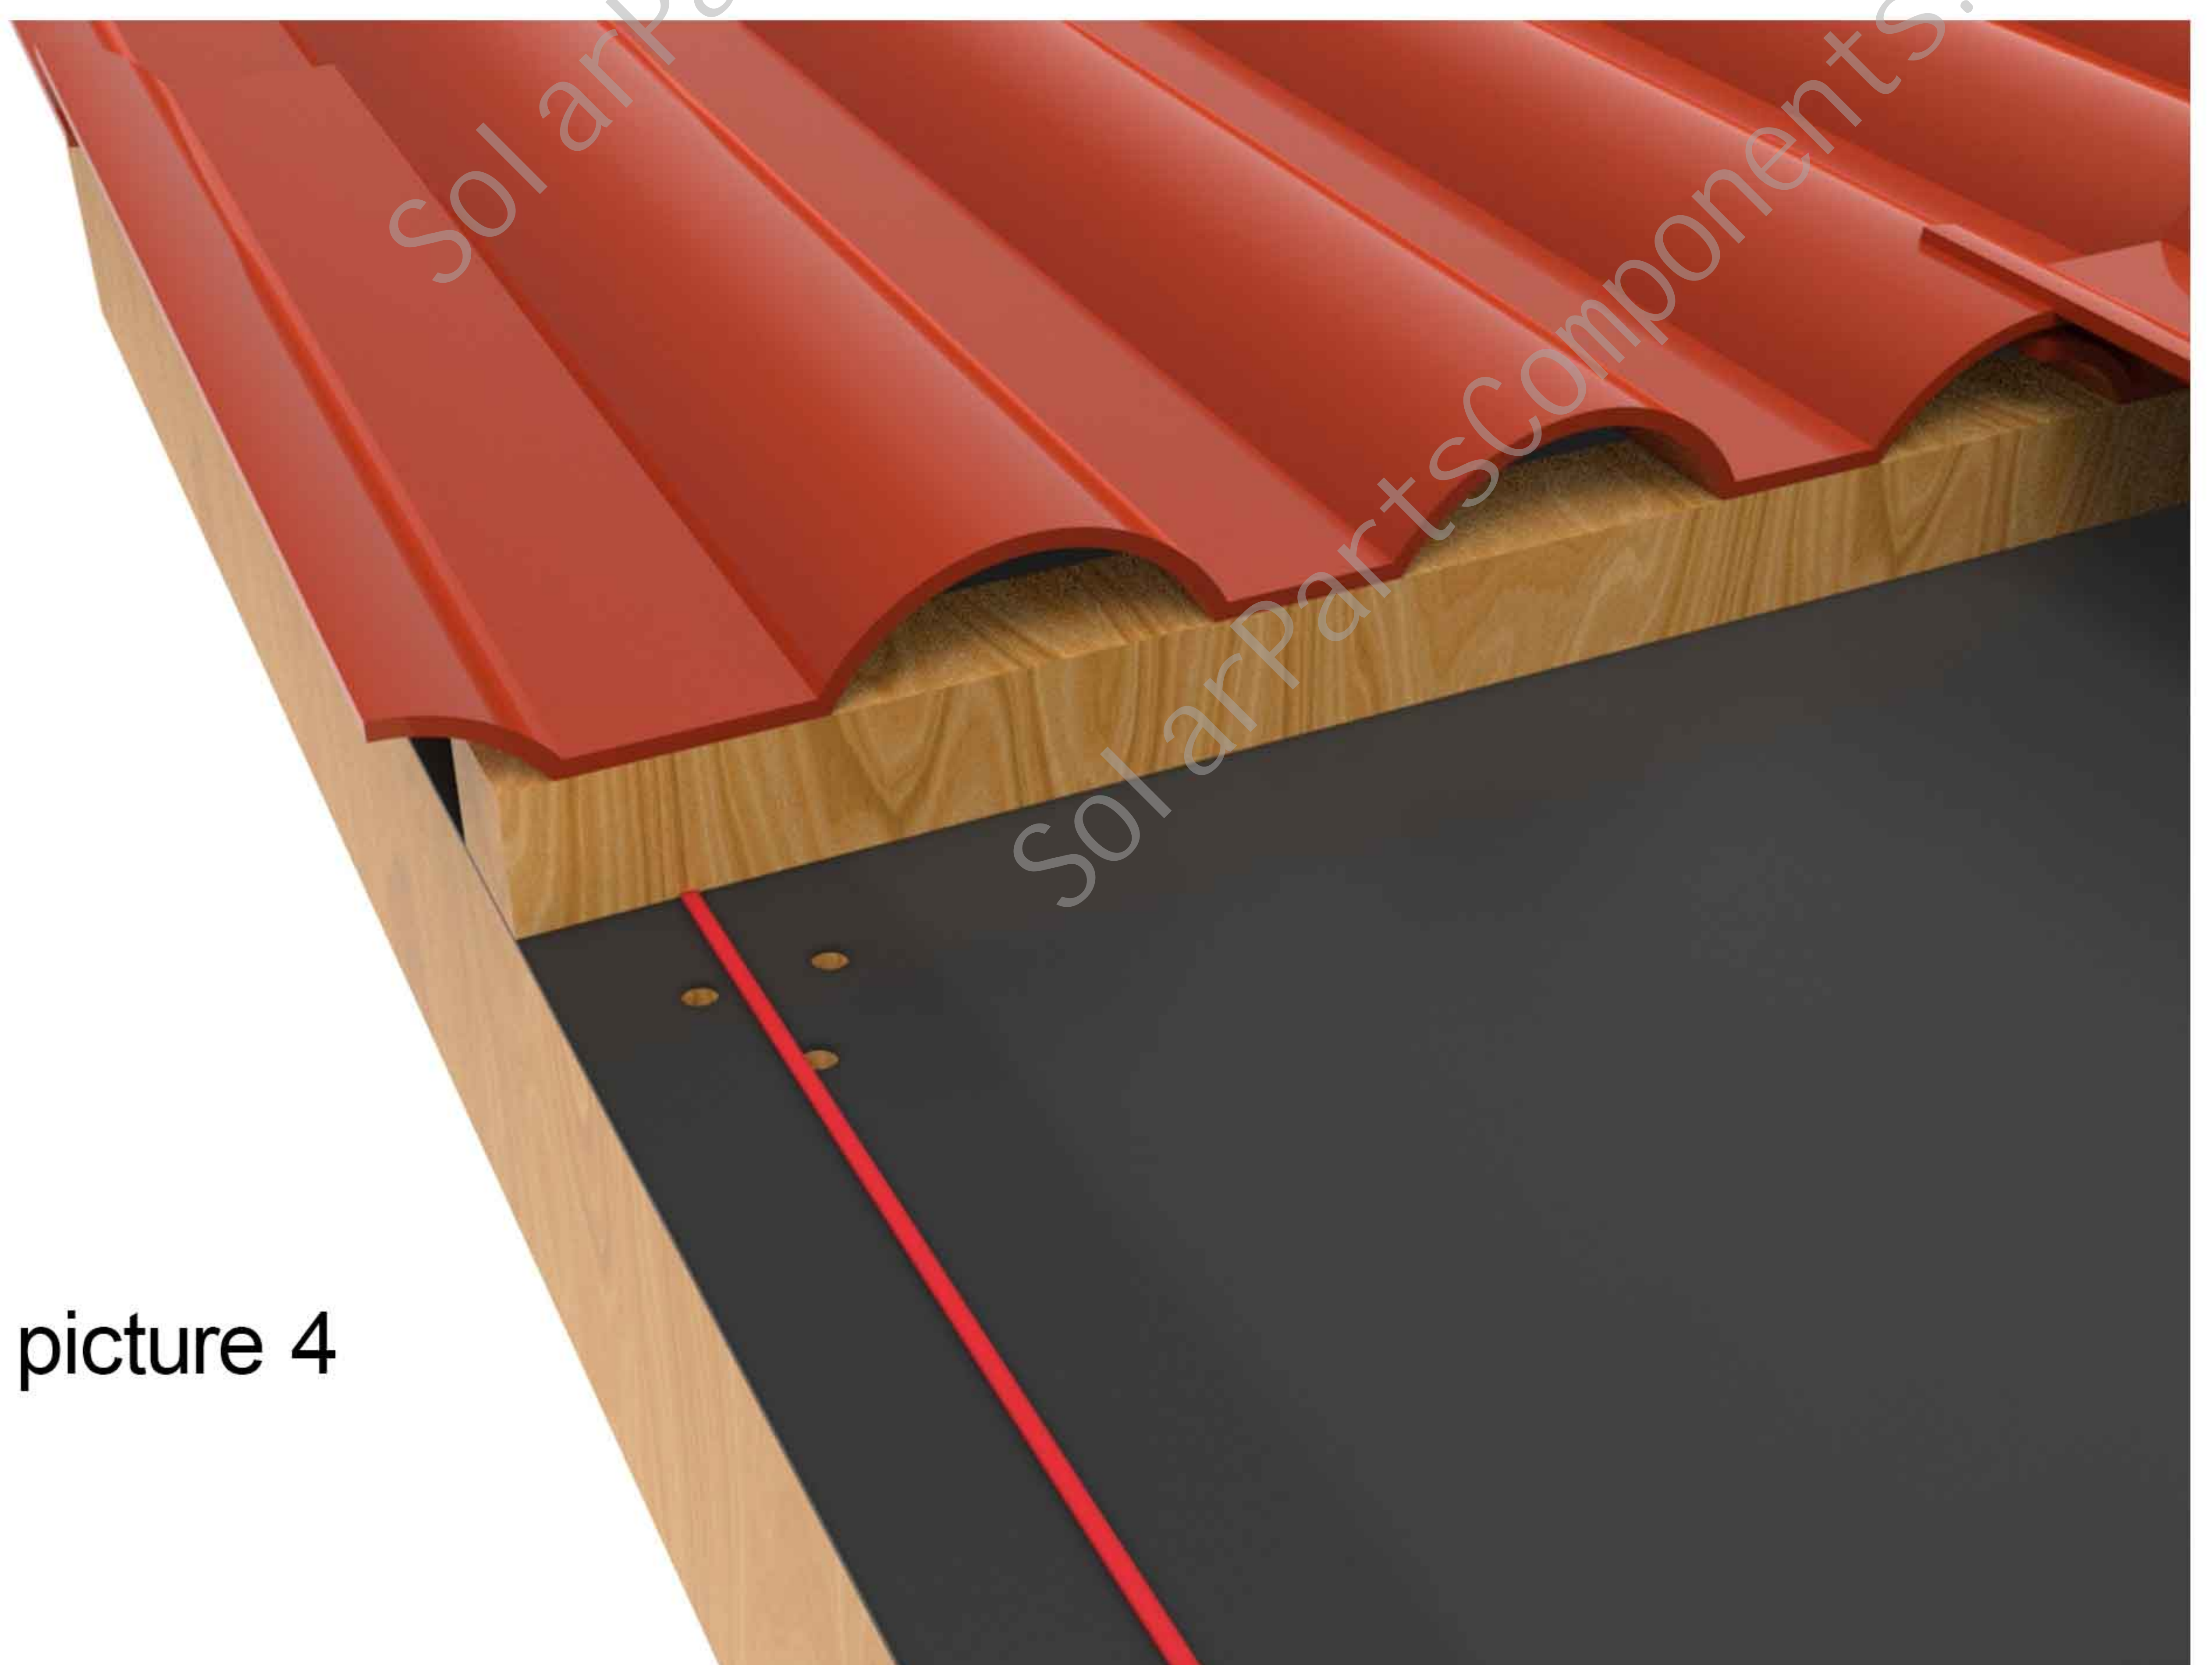

Step four, apply sealant to the drilling position of the main beam, as picture 5 shows.

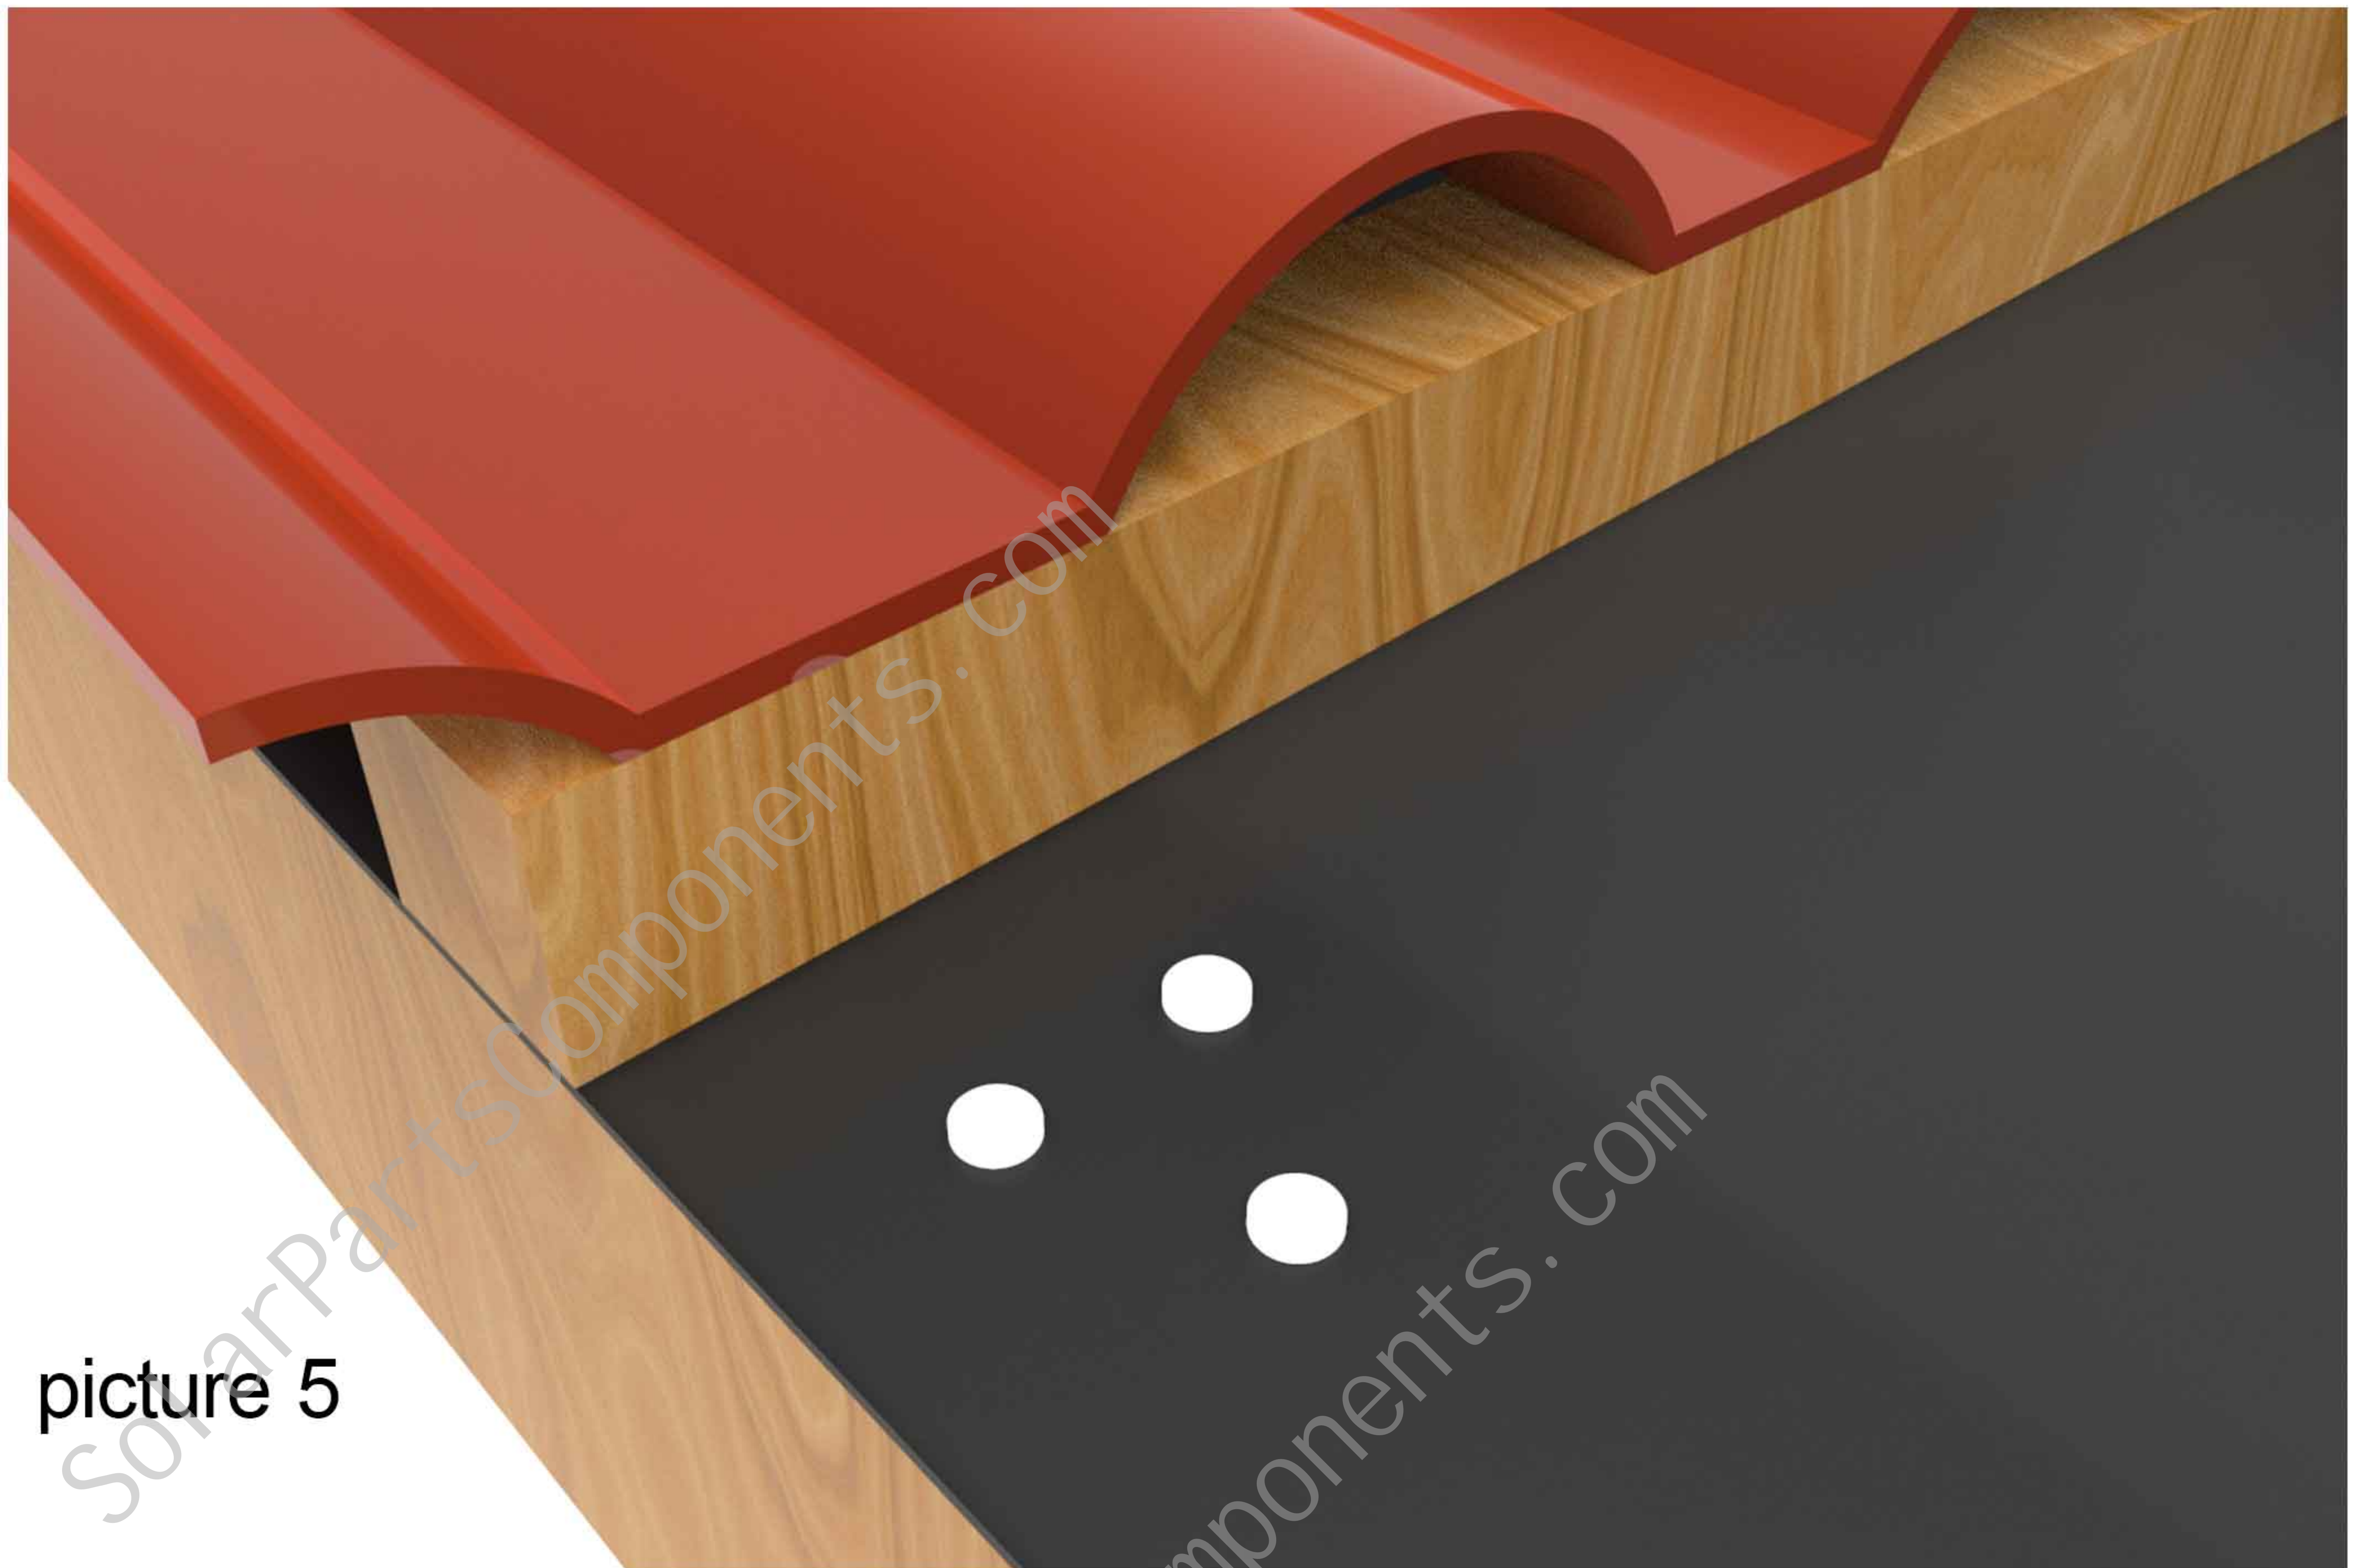


picture 5

Step five, put the stainless-steel hook #04 on the main beam, align the holes with the drilled holes, and fix the hook on the main beam with wood screws, as picture 6 shows.




picture 6


After fixing as picture 7 shows.

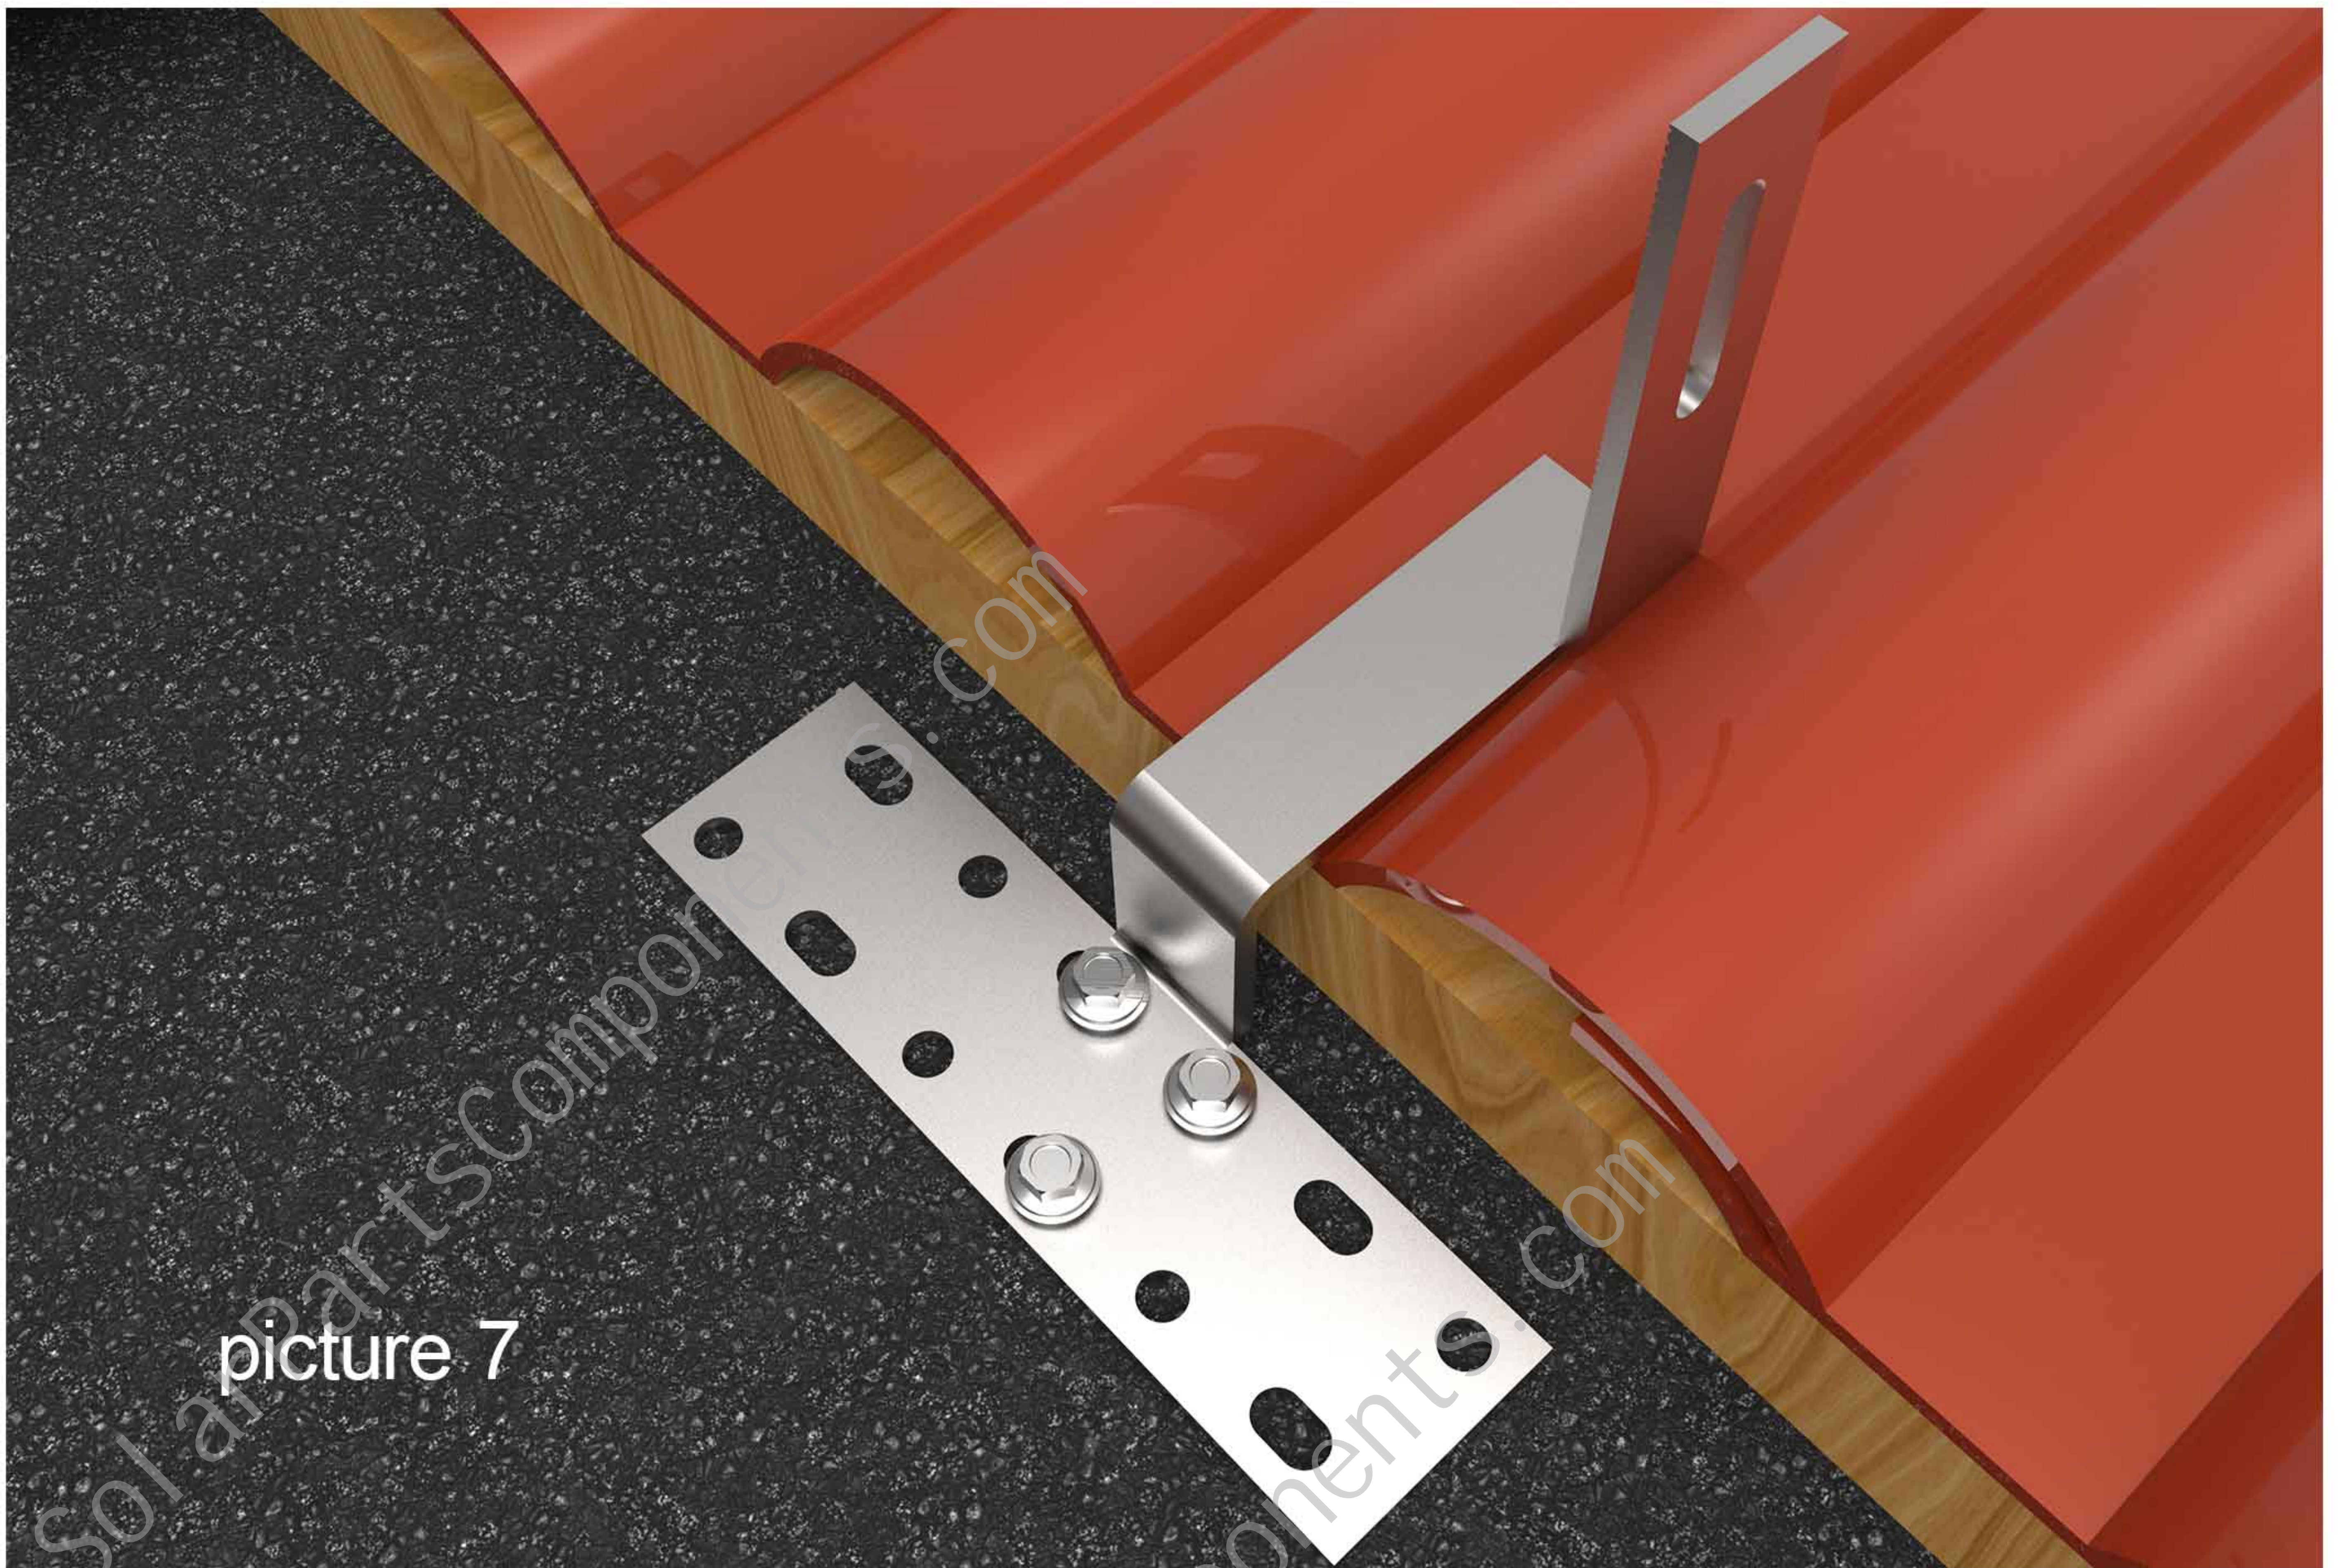


Step six , the effect after installing the stainless-steel hook # 03 and covering the tiles as picture 8 shows. The upper part of the stainless-steel hook # 03 is exposed outside the tiles.

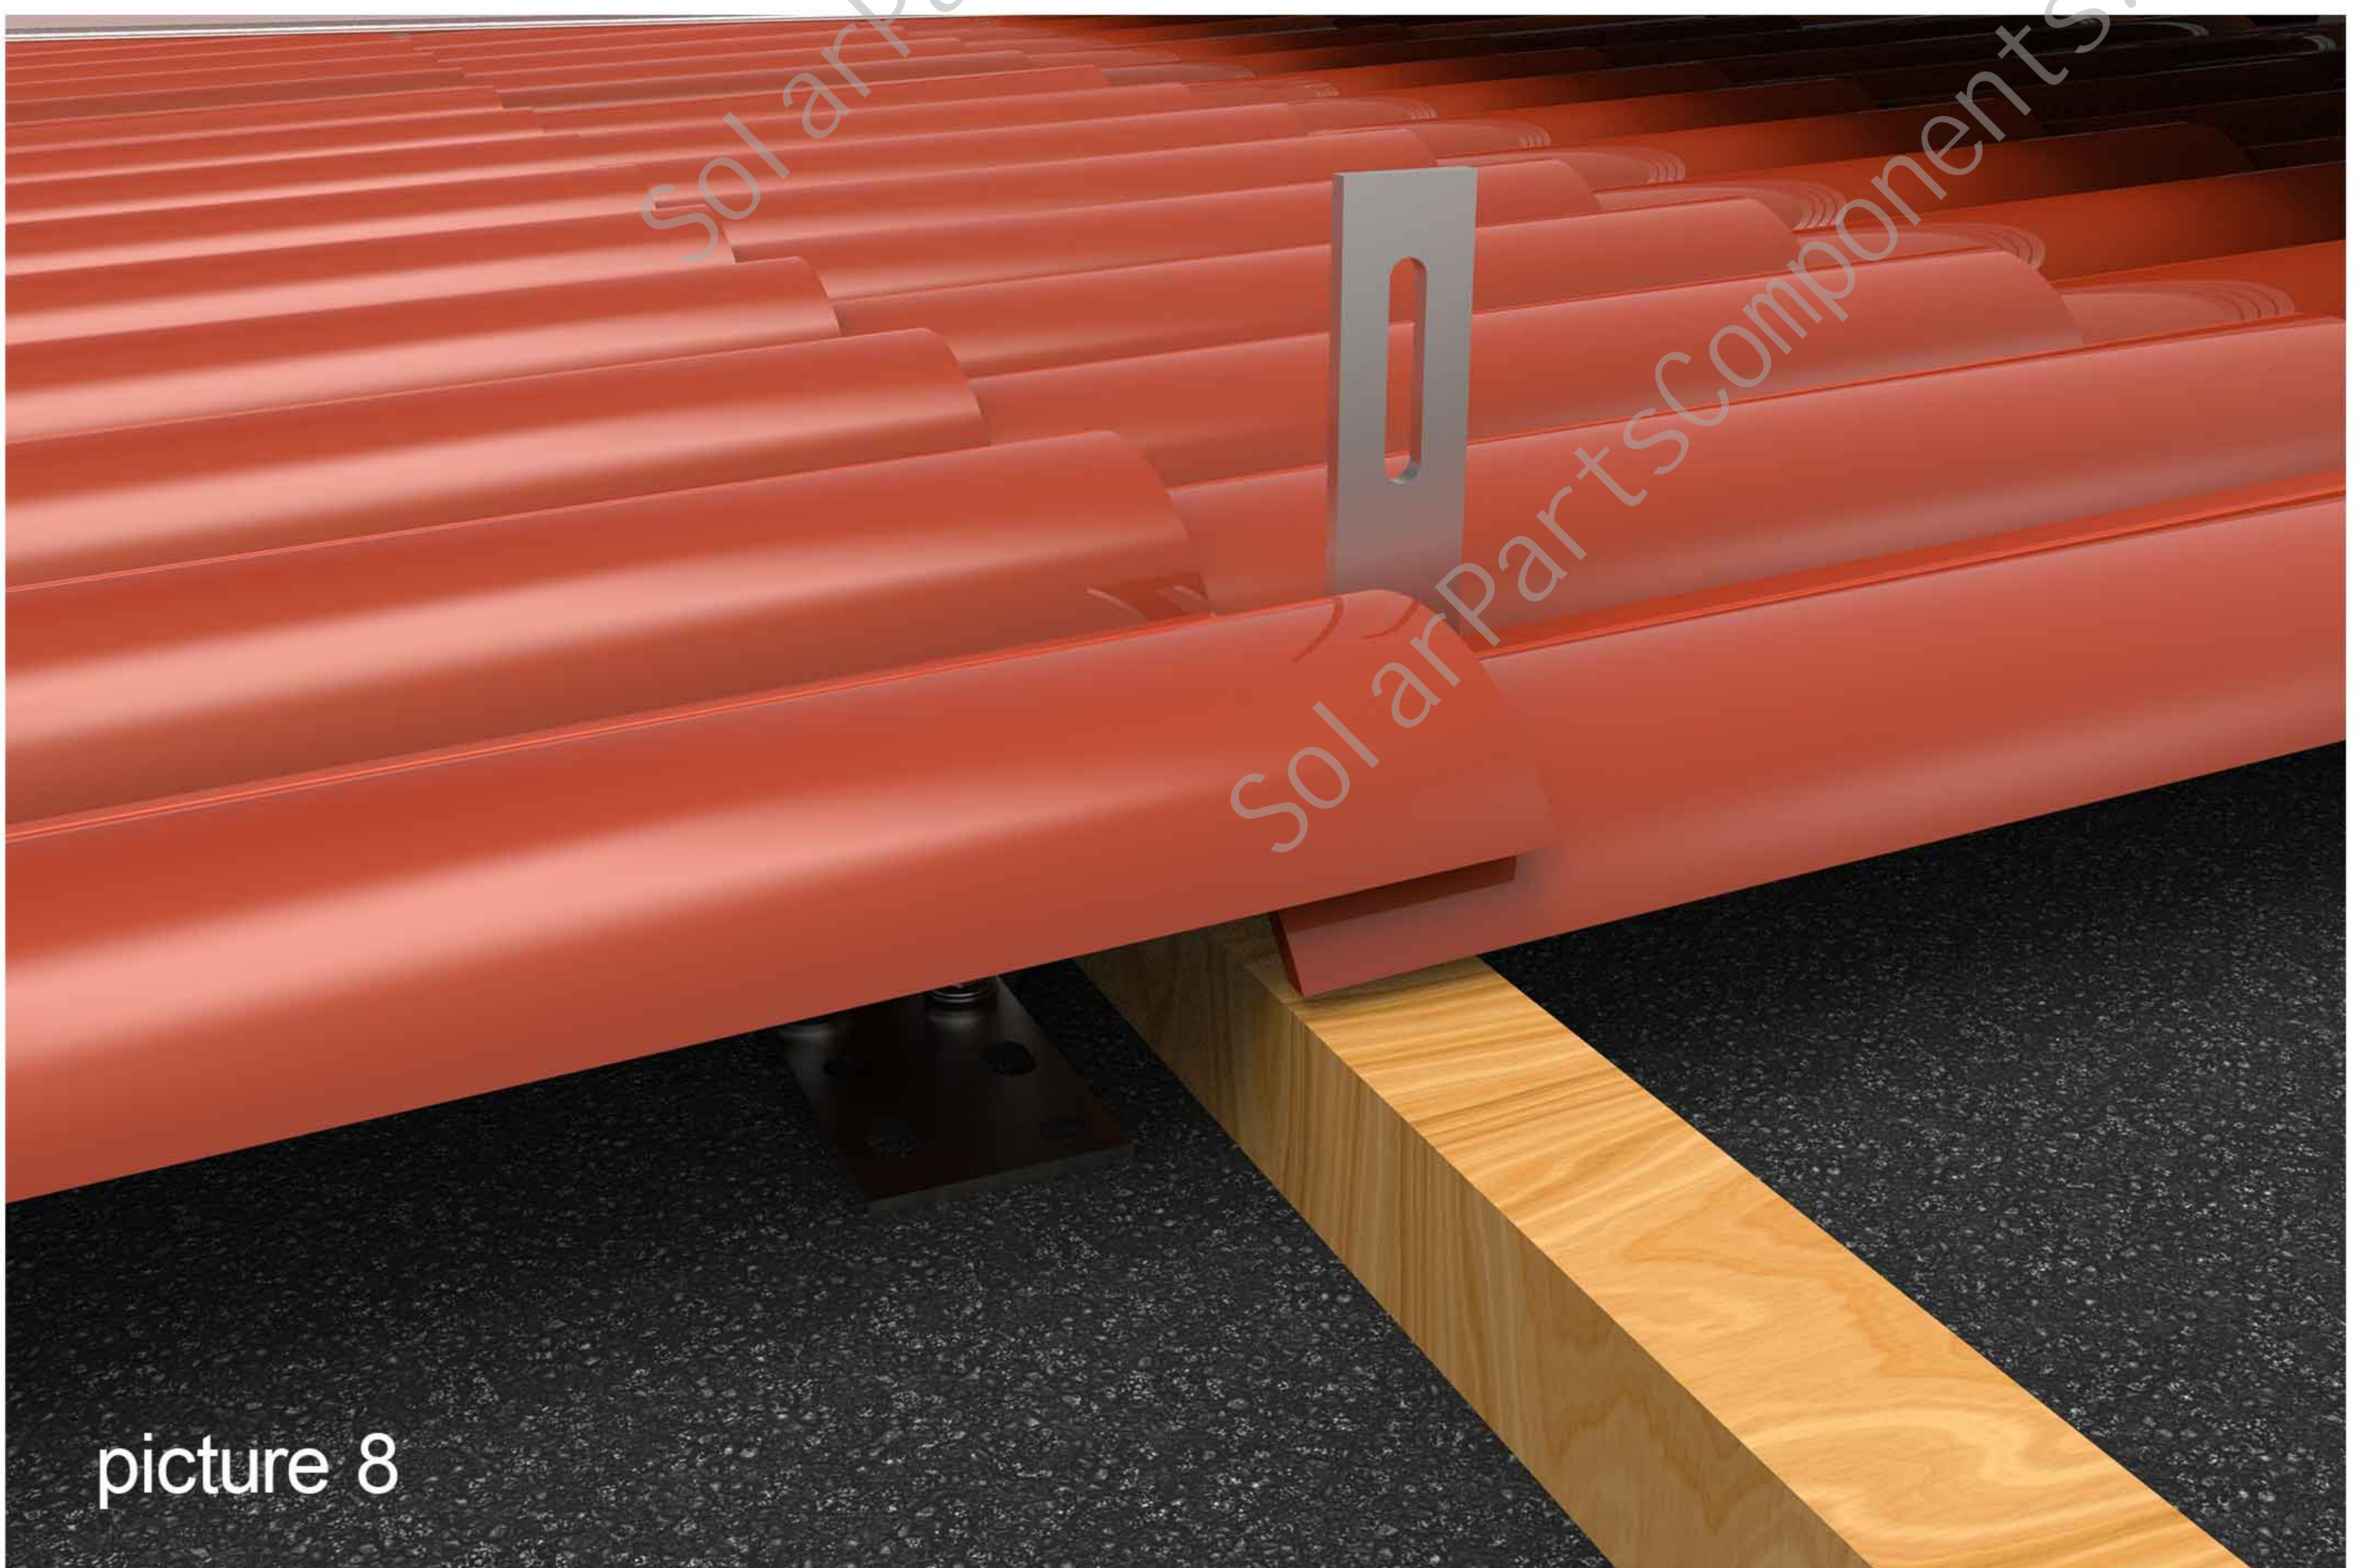


Step seven, install the rail on the stainless-steel hook # 04 with M8*25 bolts. as picture 9 shows

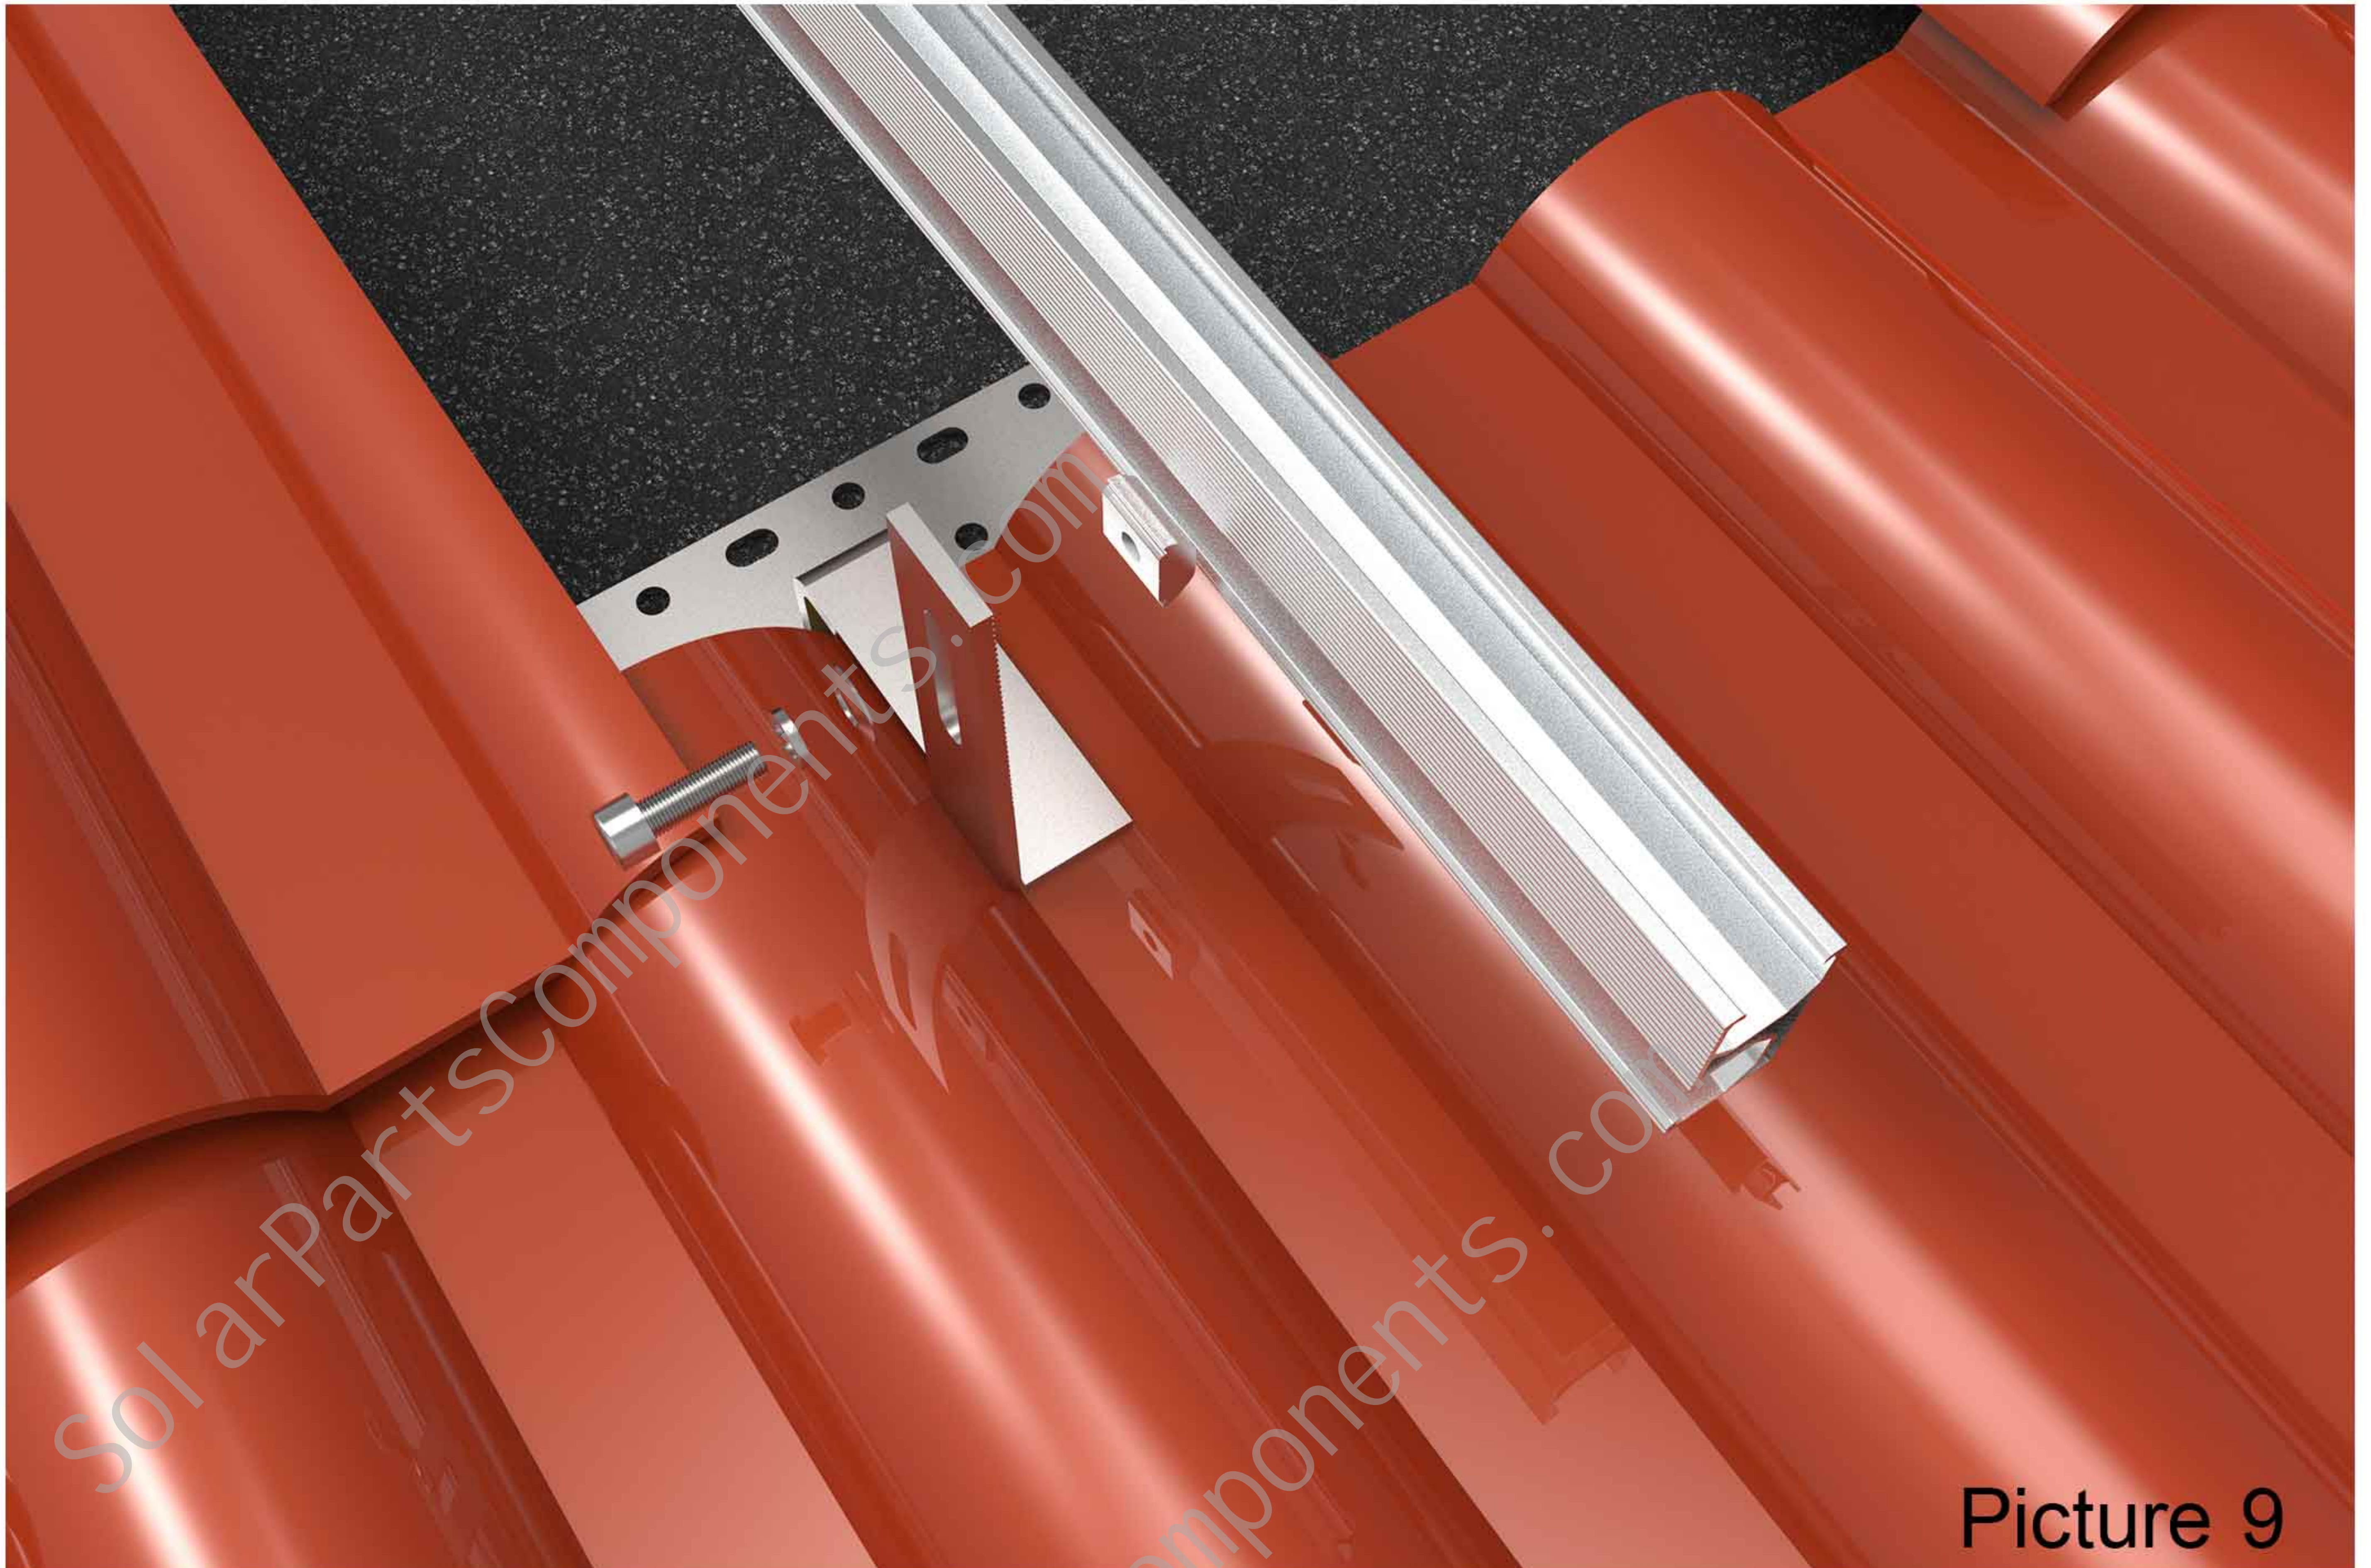

Step eight, effect after installation as picture 10 shows.

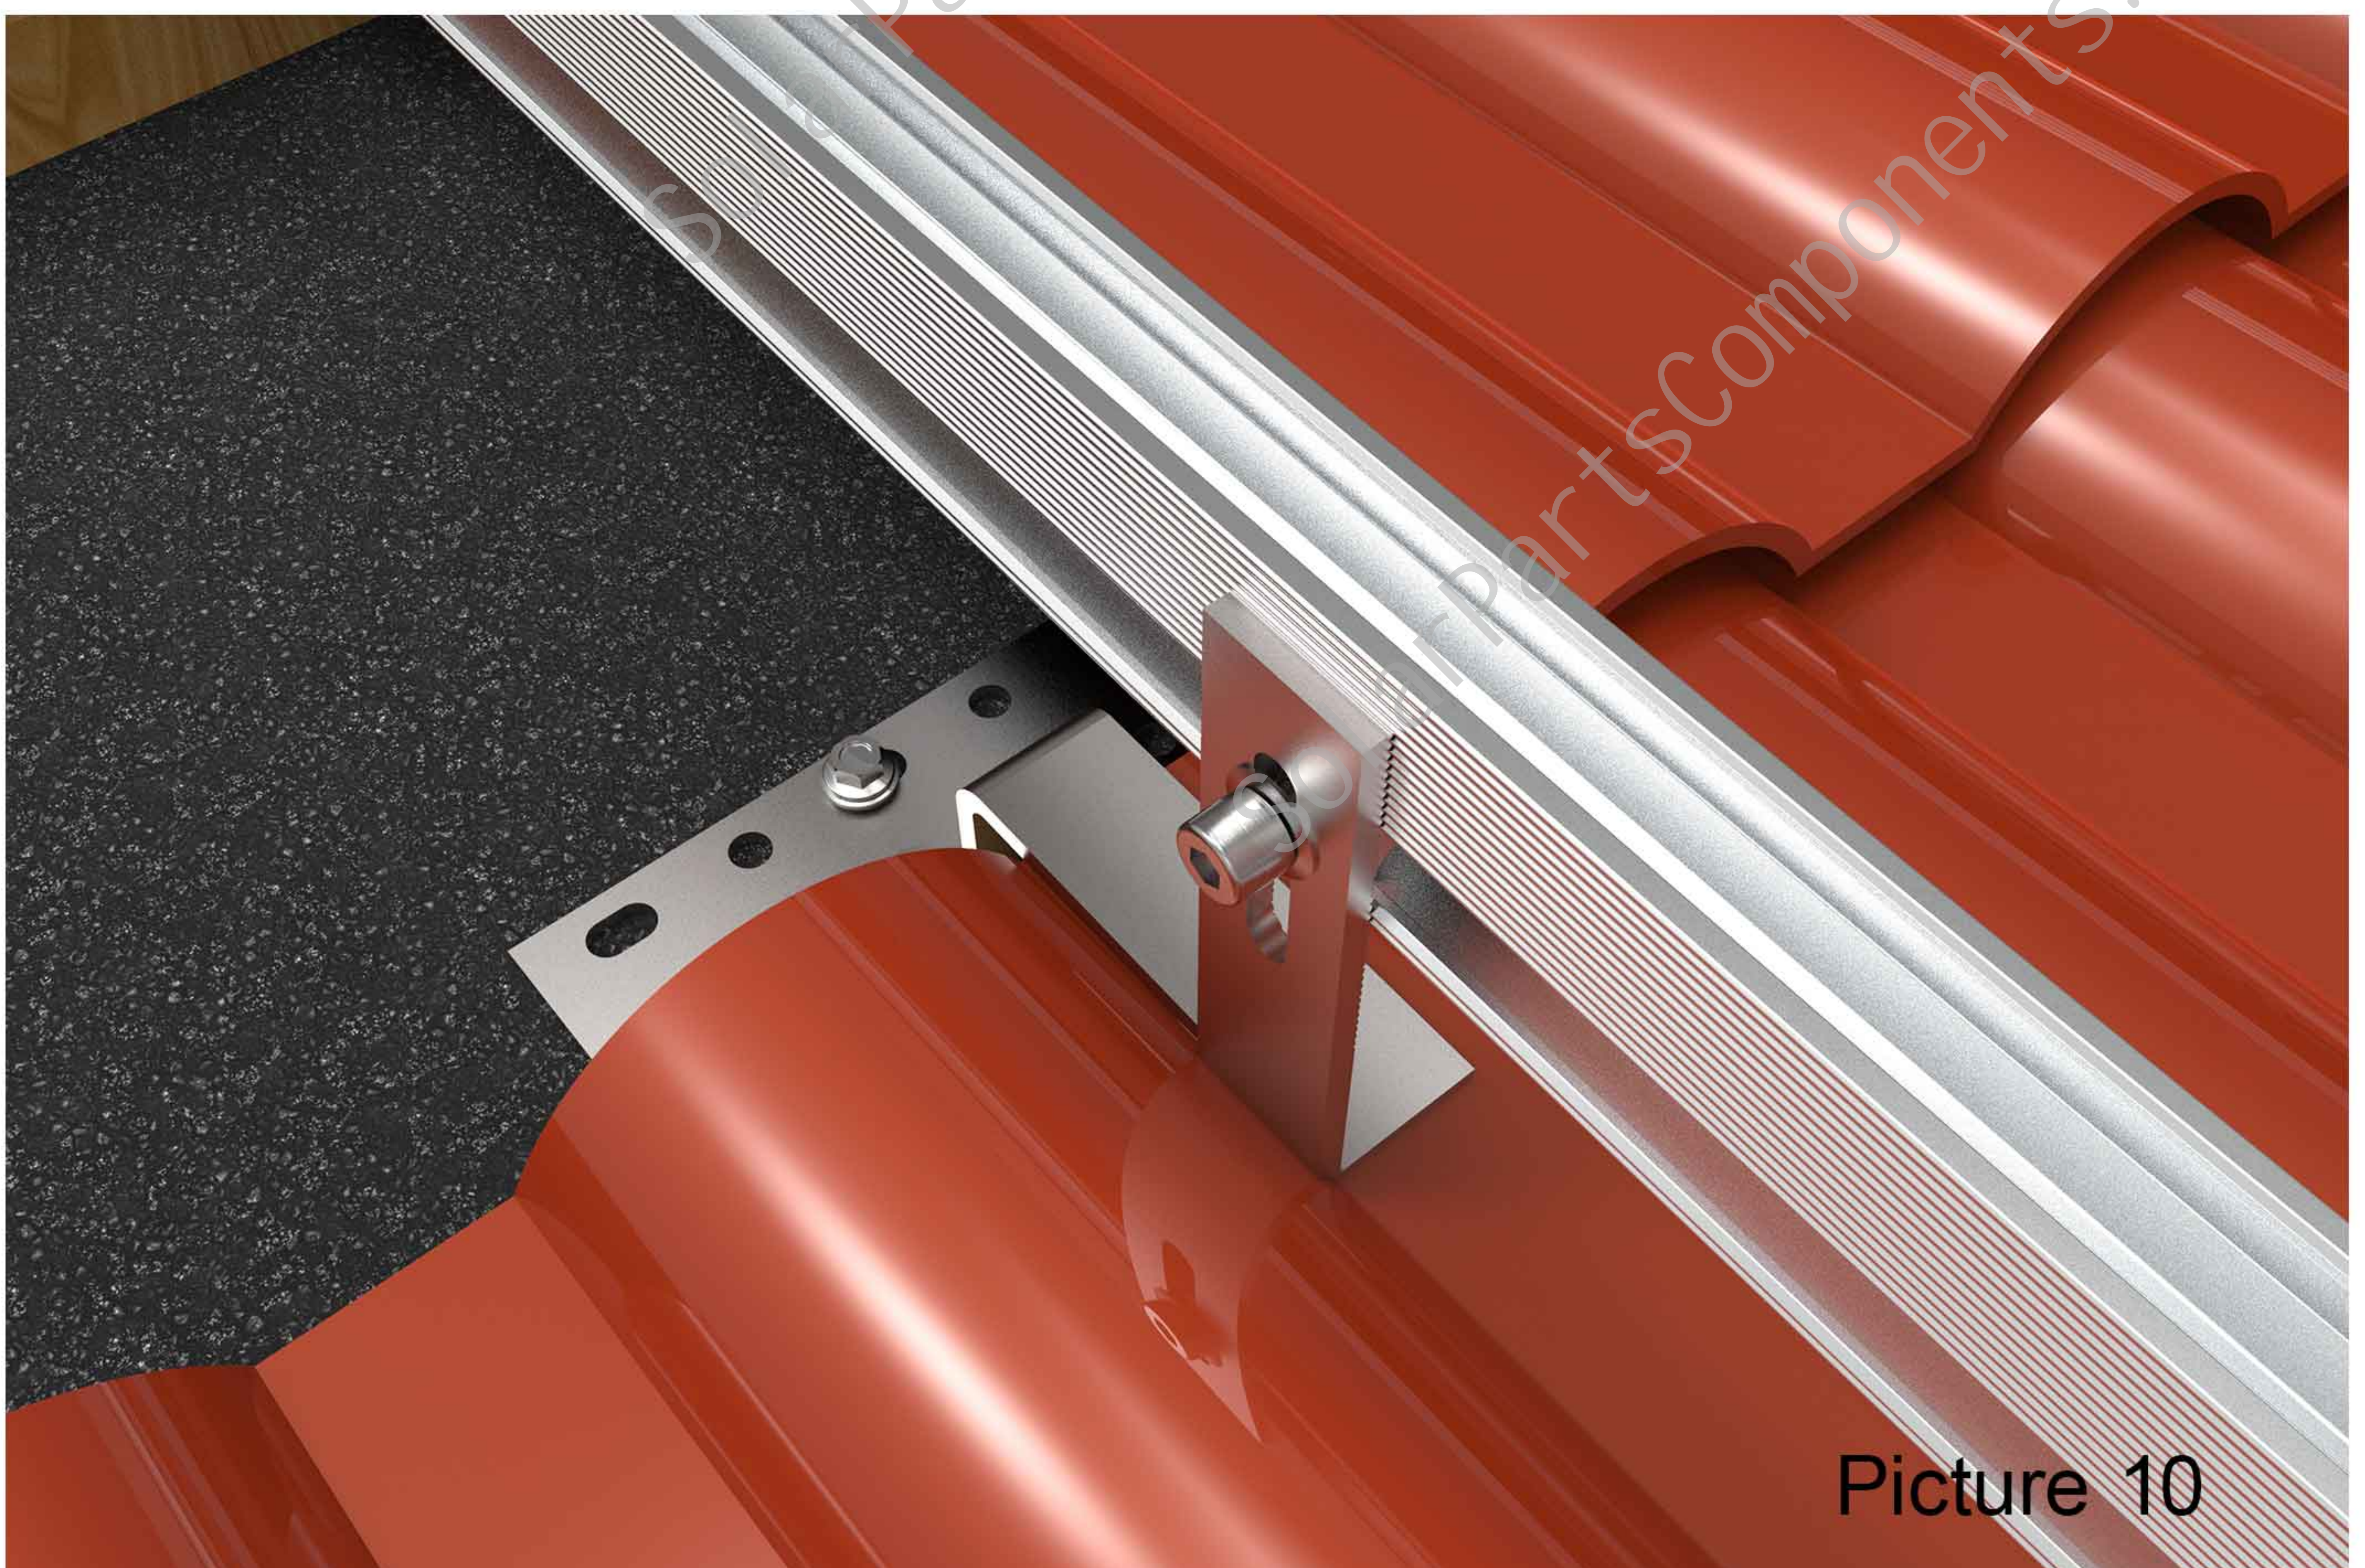

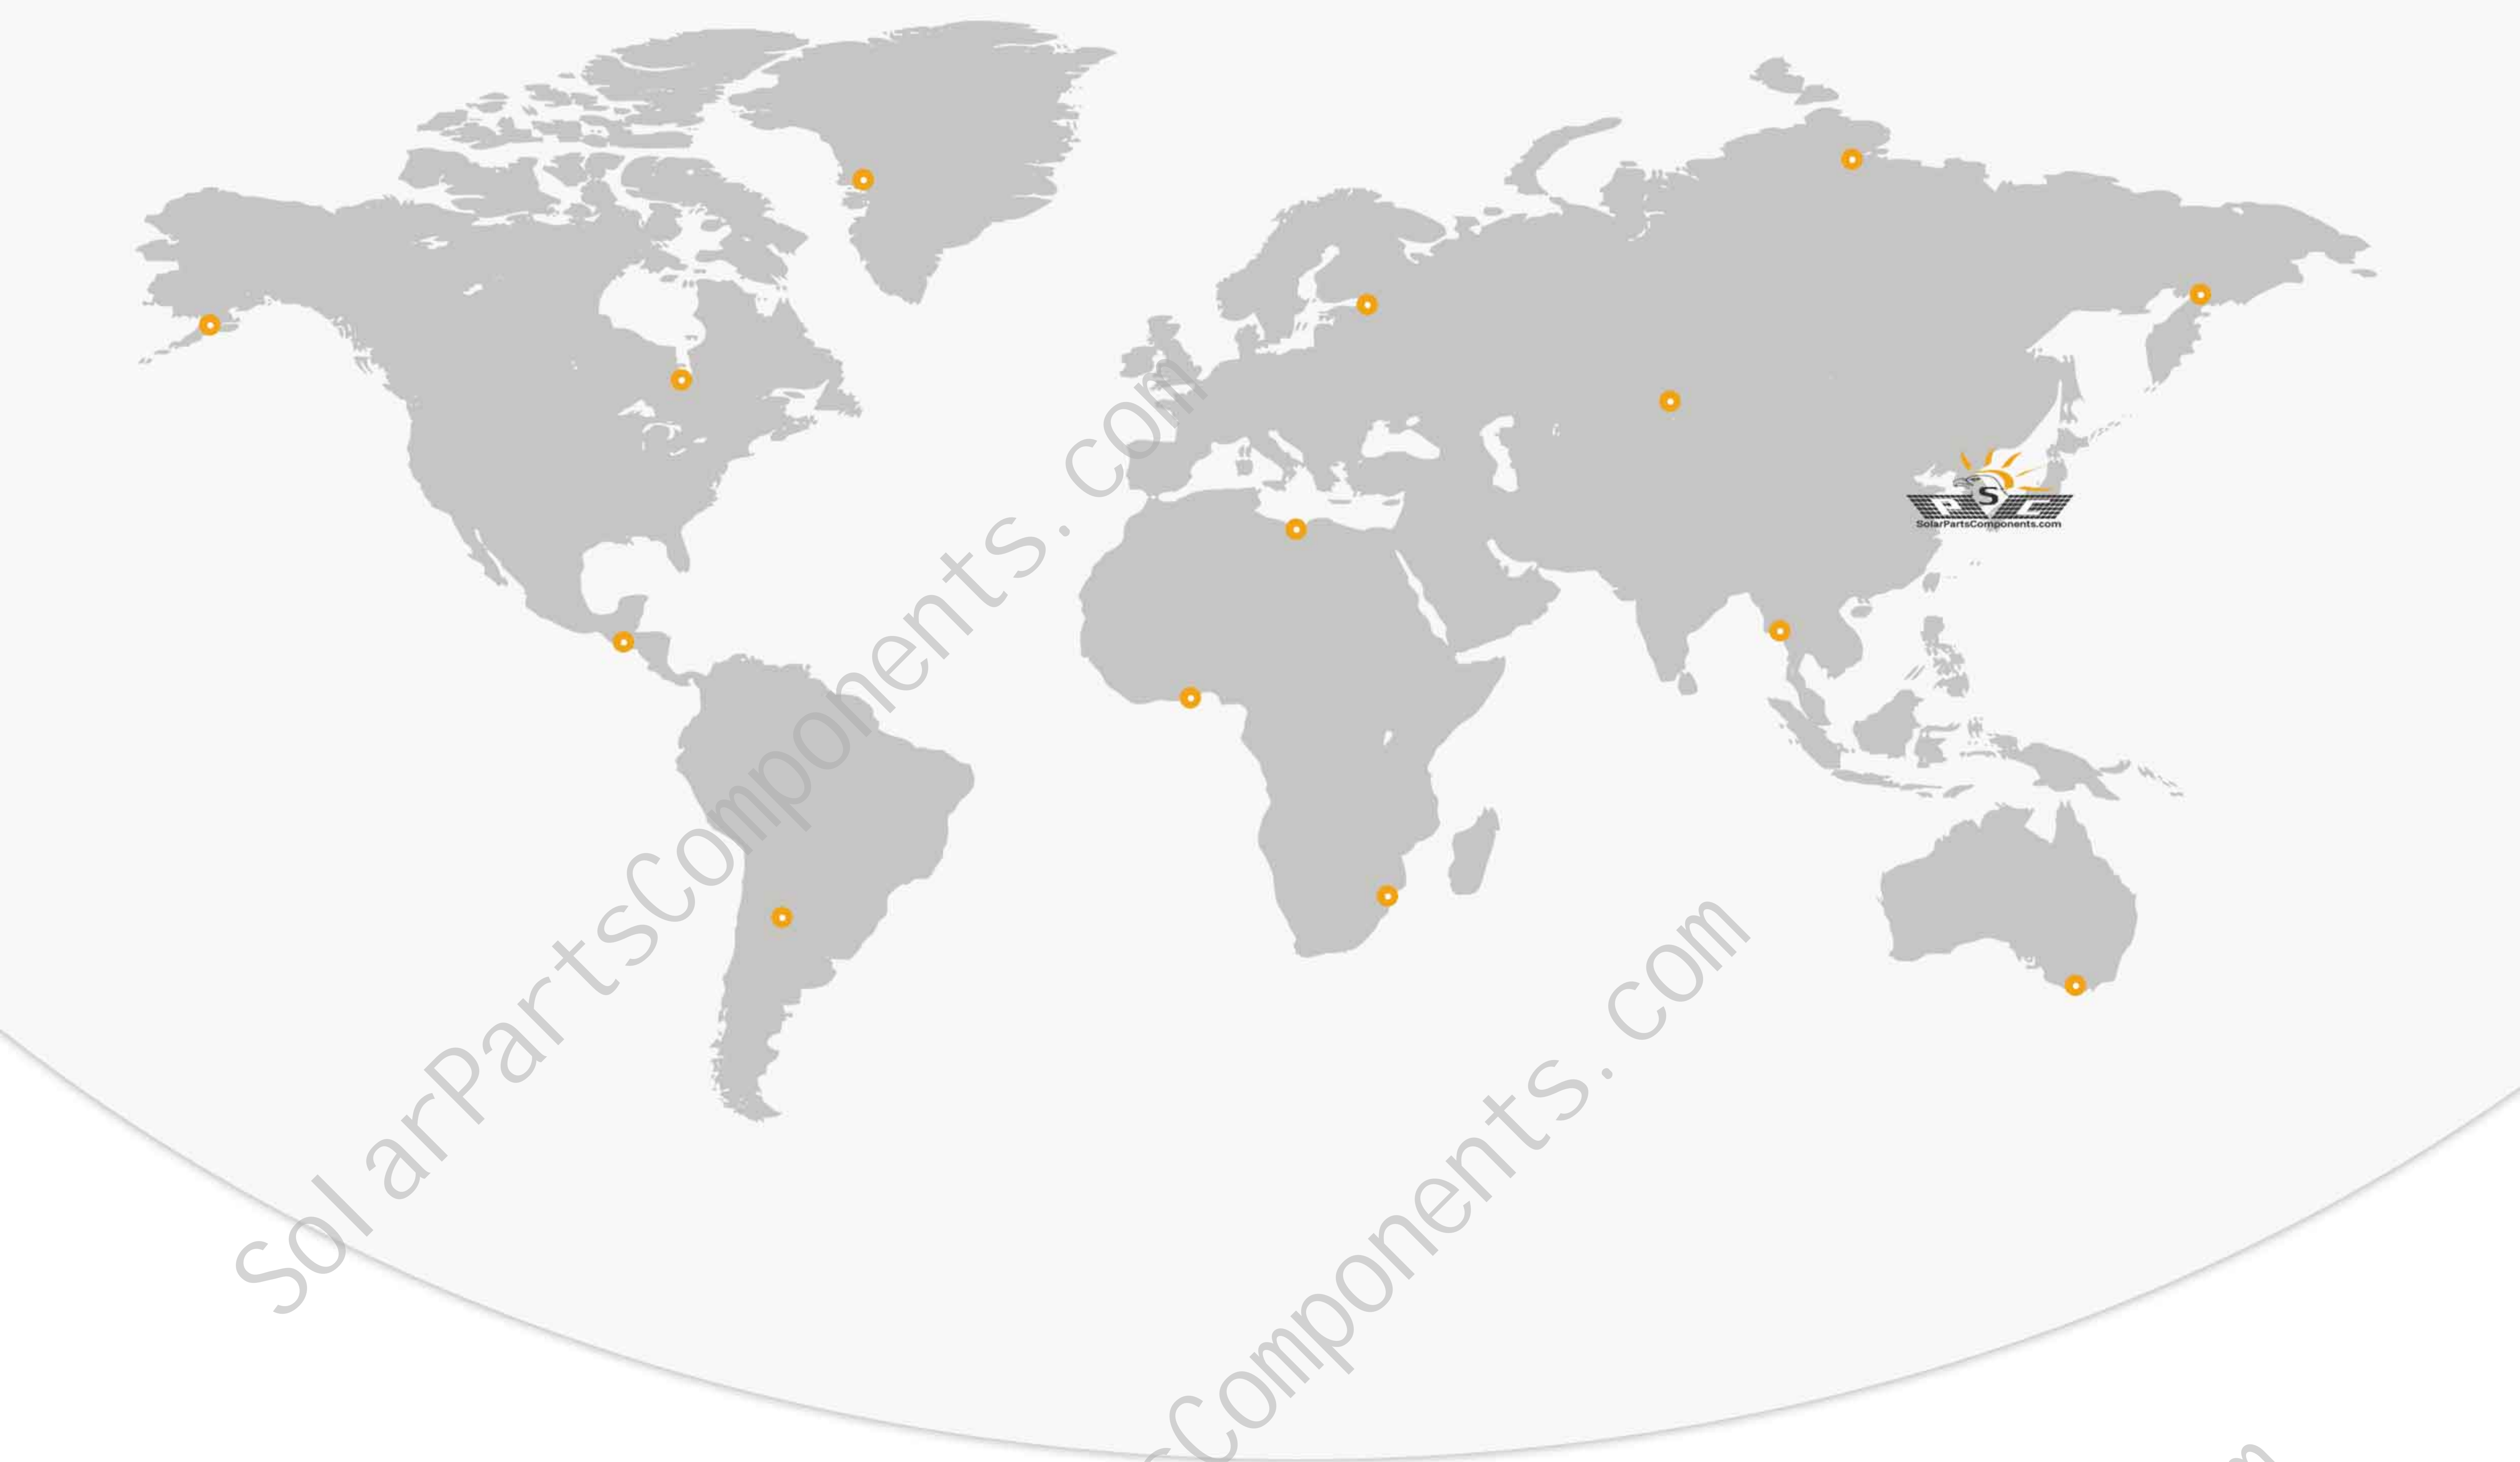

Solar Mounting Parts & Components Factory



SolarPartsComponents.com
XIAMEN TOP BEST TECH CO.,LTD

Info@SolarPartsComponents.com



Tel: 0086-592-5900866 Fax: 0086-592-5900266

OP: B516, No.17 XiangXing 1st Road, HuLi Area,Xiamen,China,361006

Factory 1: No.186 XiFu Road, Xike Town,Tongan District, XiaMen, Fujian, China, 361100

Factory 2: Gan'En Industrial Zone,Shi Shan Town,Nan'An, QuanZhou, Fujian, China, 362311