

Installation Instruction

Flat Tile Roof Hook

SPC-IK-12




1

Remove tiles around installation area



2

Locate, identify, and mark the rafters.

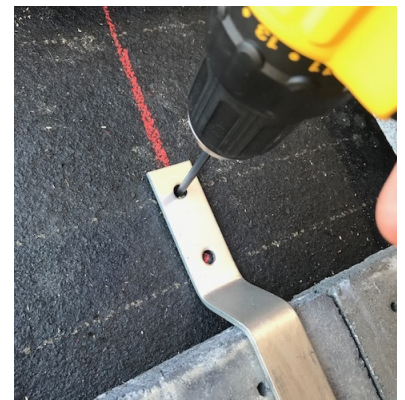


3

Position hook, and using 3/16" bit, drill 2 pilot holes.



4

Clean debris and fill the holes with roofing sealant.

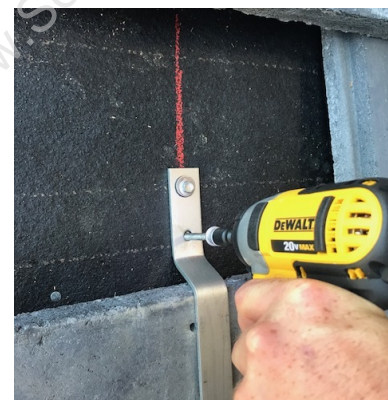

5

Reposition the hook and secure using included lag screws



6

Replace tiles and if necessary, notch with grinder to ensure proper fit.

Required tools: Rafter locator, Chalk, 3/16" drill bit, sealant, grinder.