


## ROOF SOLUTION

INSTALLATION INSTRUCTIONS FOR STAINLESS STEEL HOOK#05

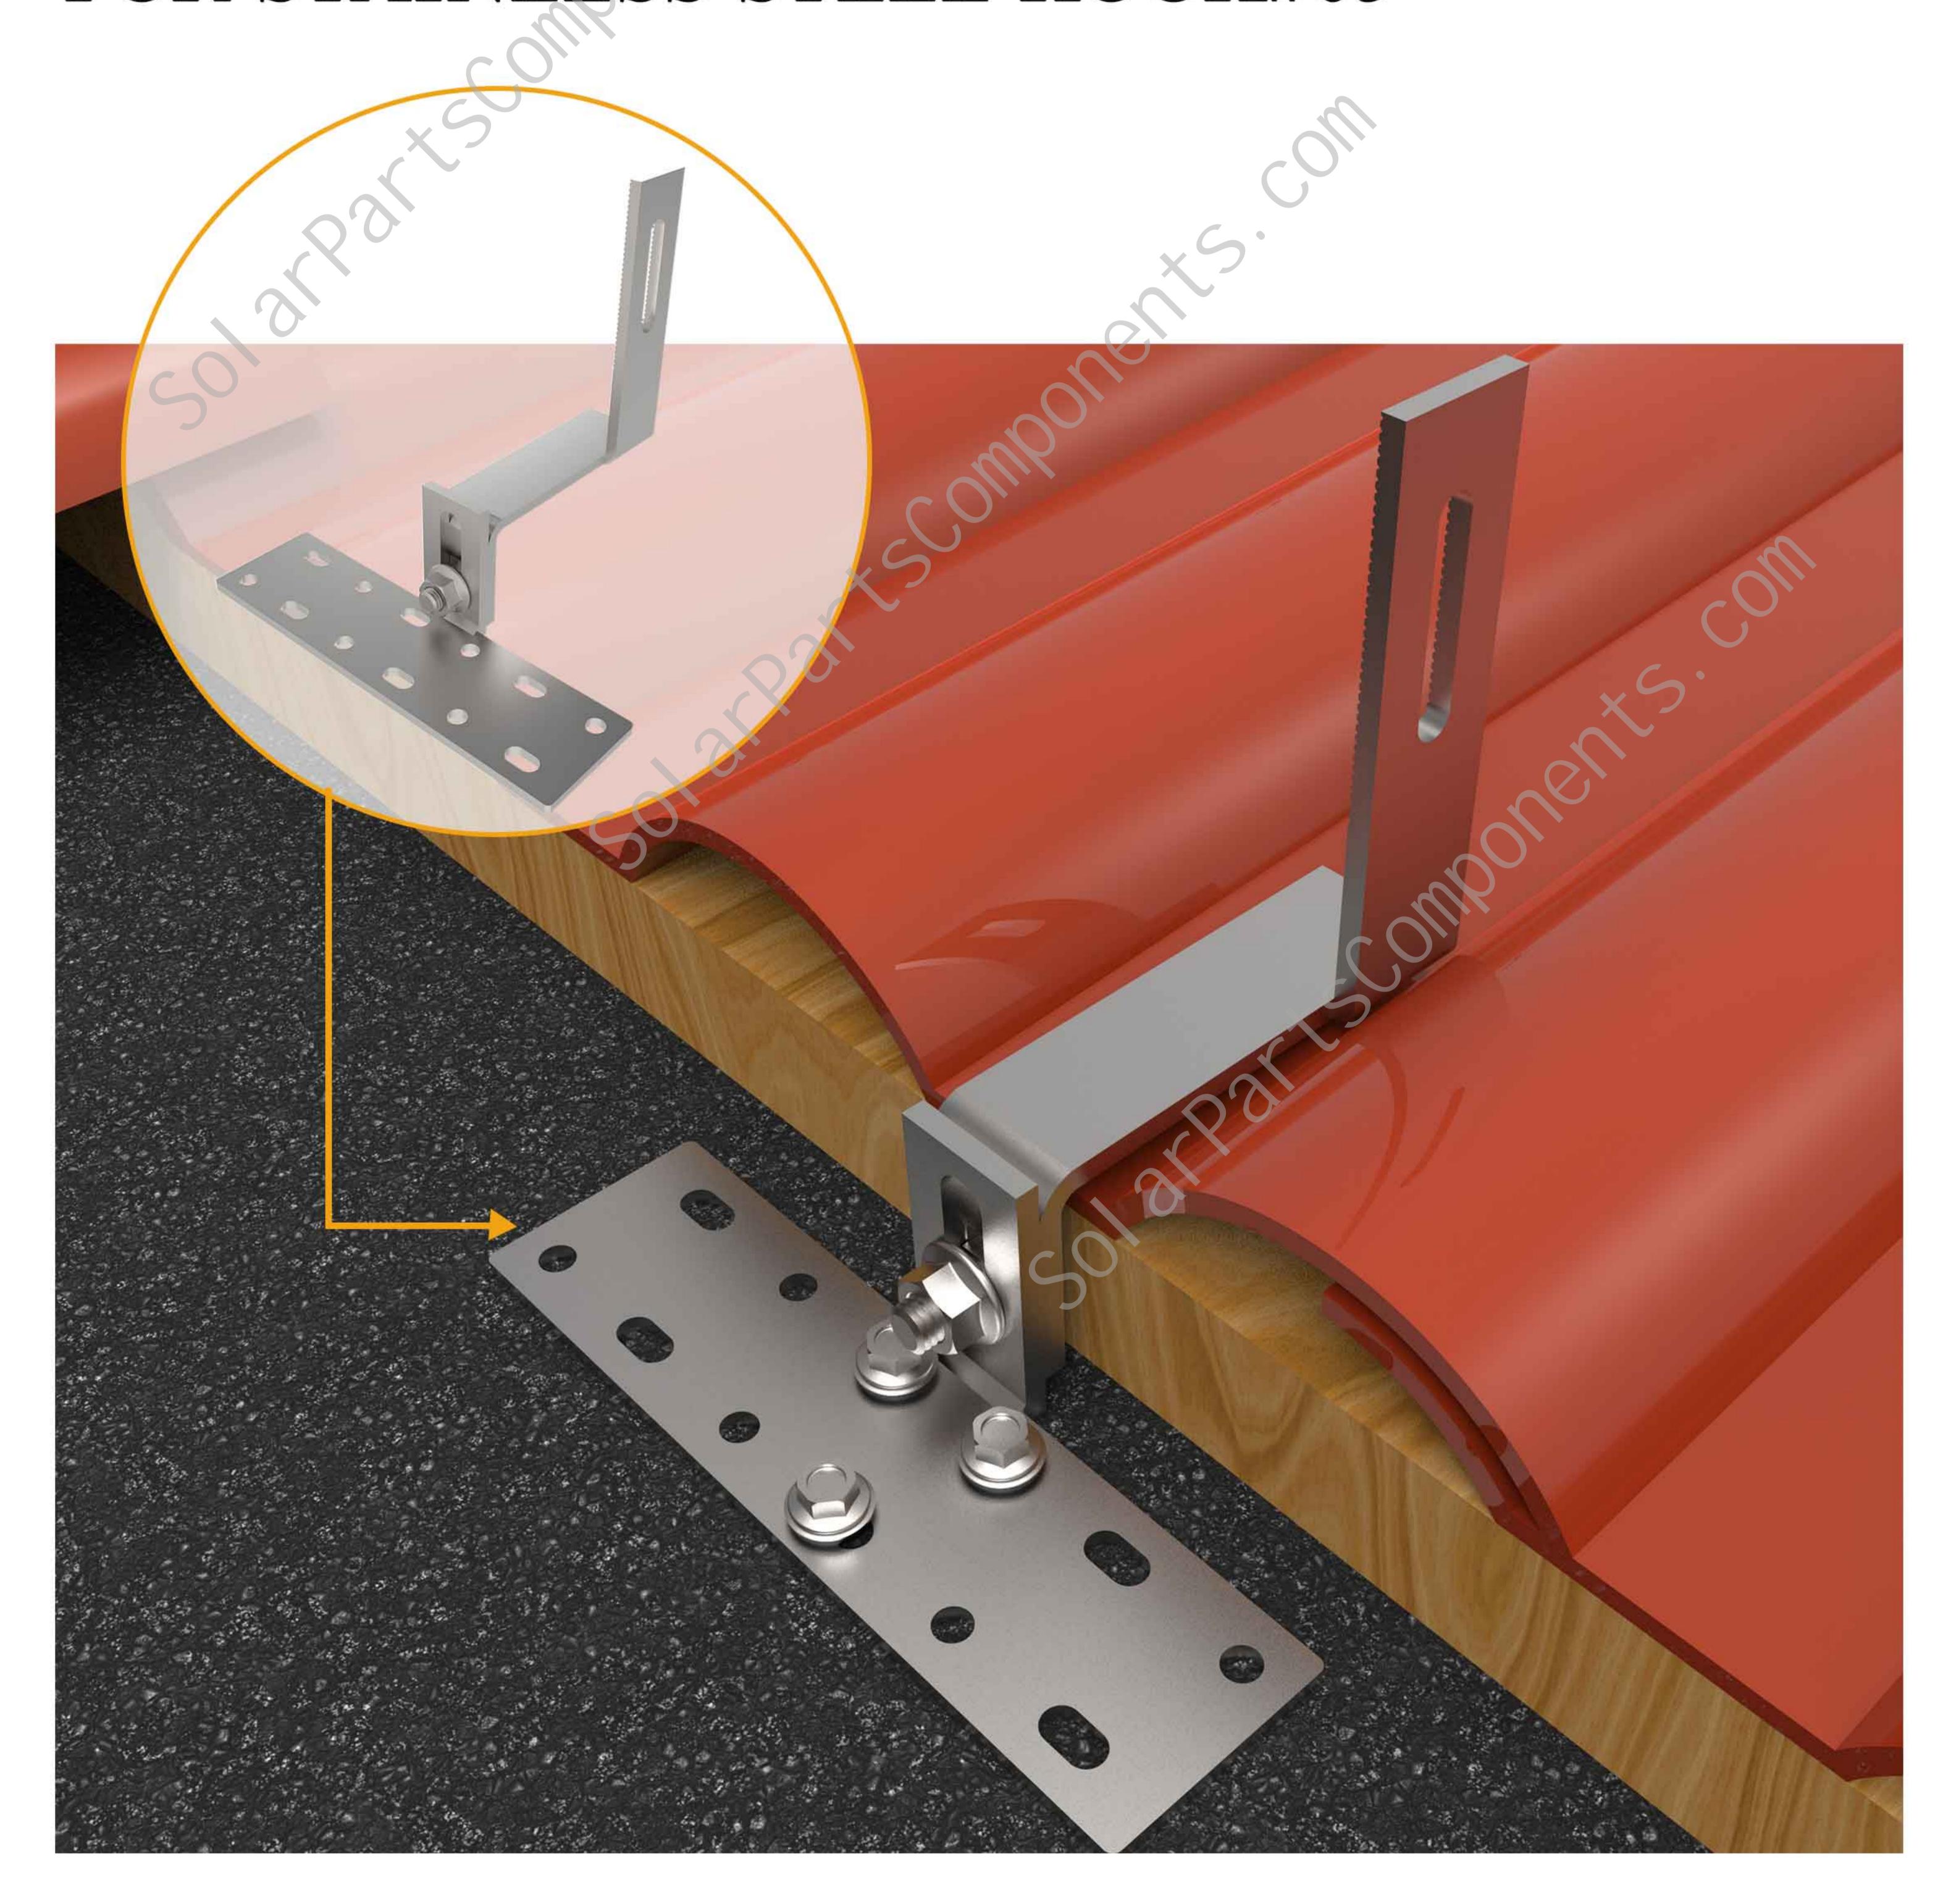


## Installation instructions for stainless steel hook#05

Step one, open the Spanish tiles



Step two, find the position of the main beam of the roof and mark it with a line above the main beam.

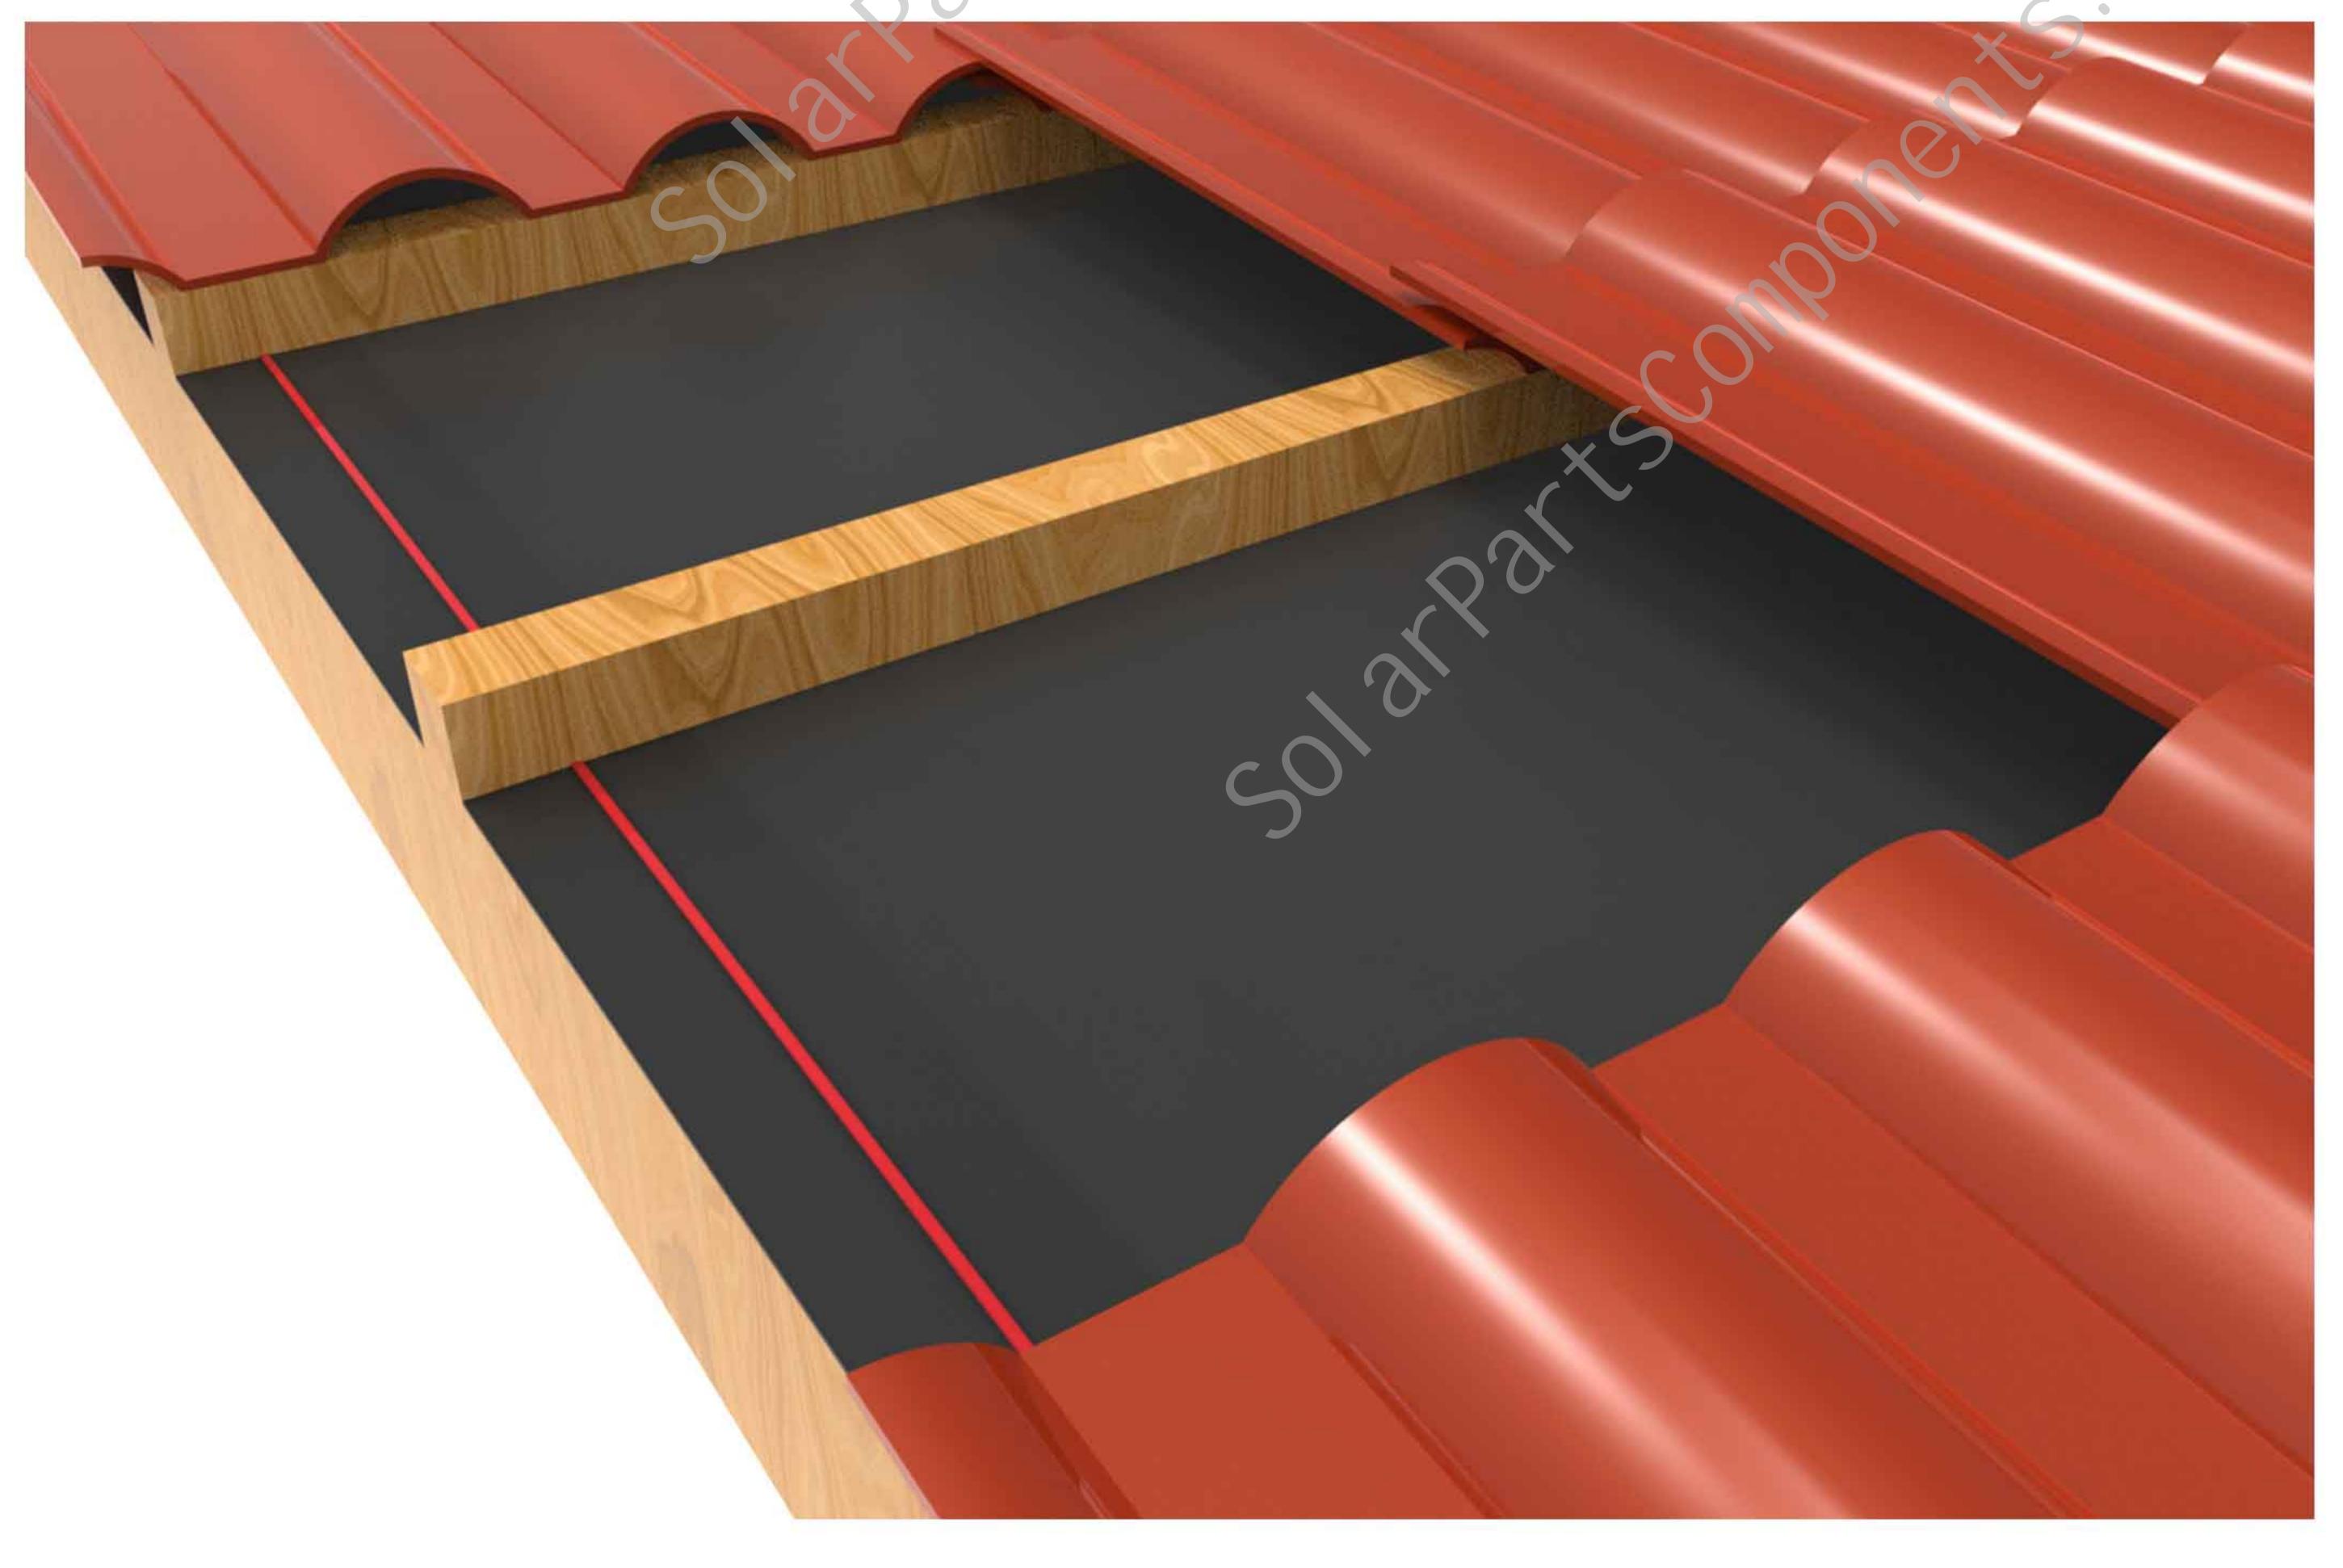


Step three, put the stainless-steel hook #05 on the installation position of the marking, and drill holes on the main beam with an electric drill according to the hole position on the hook, as picture 3 shows.



The effect after drilling as picture 4 shows.




Step four, apply sealant to the drilling position of the main beam, as picture 5 shows.

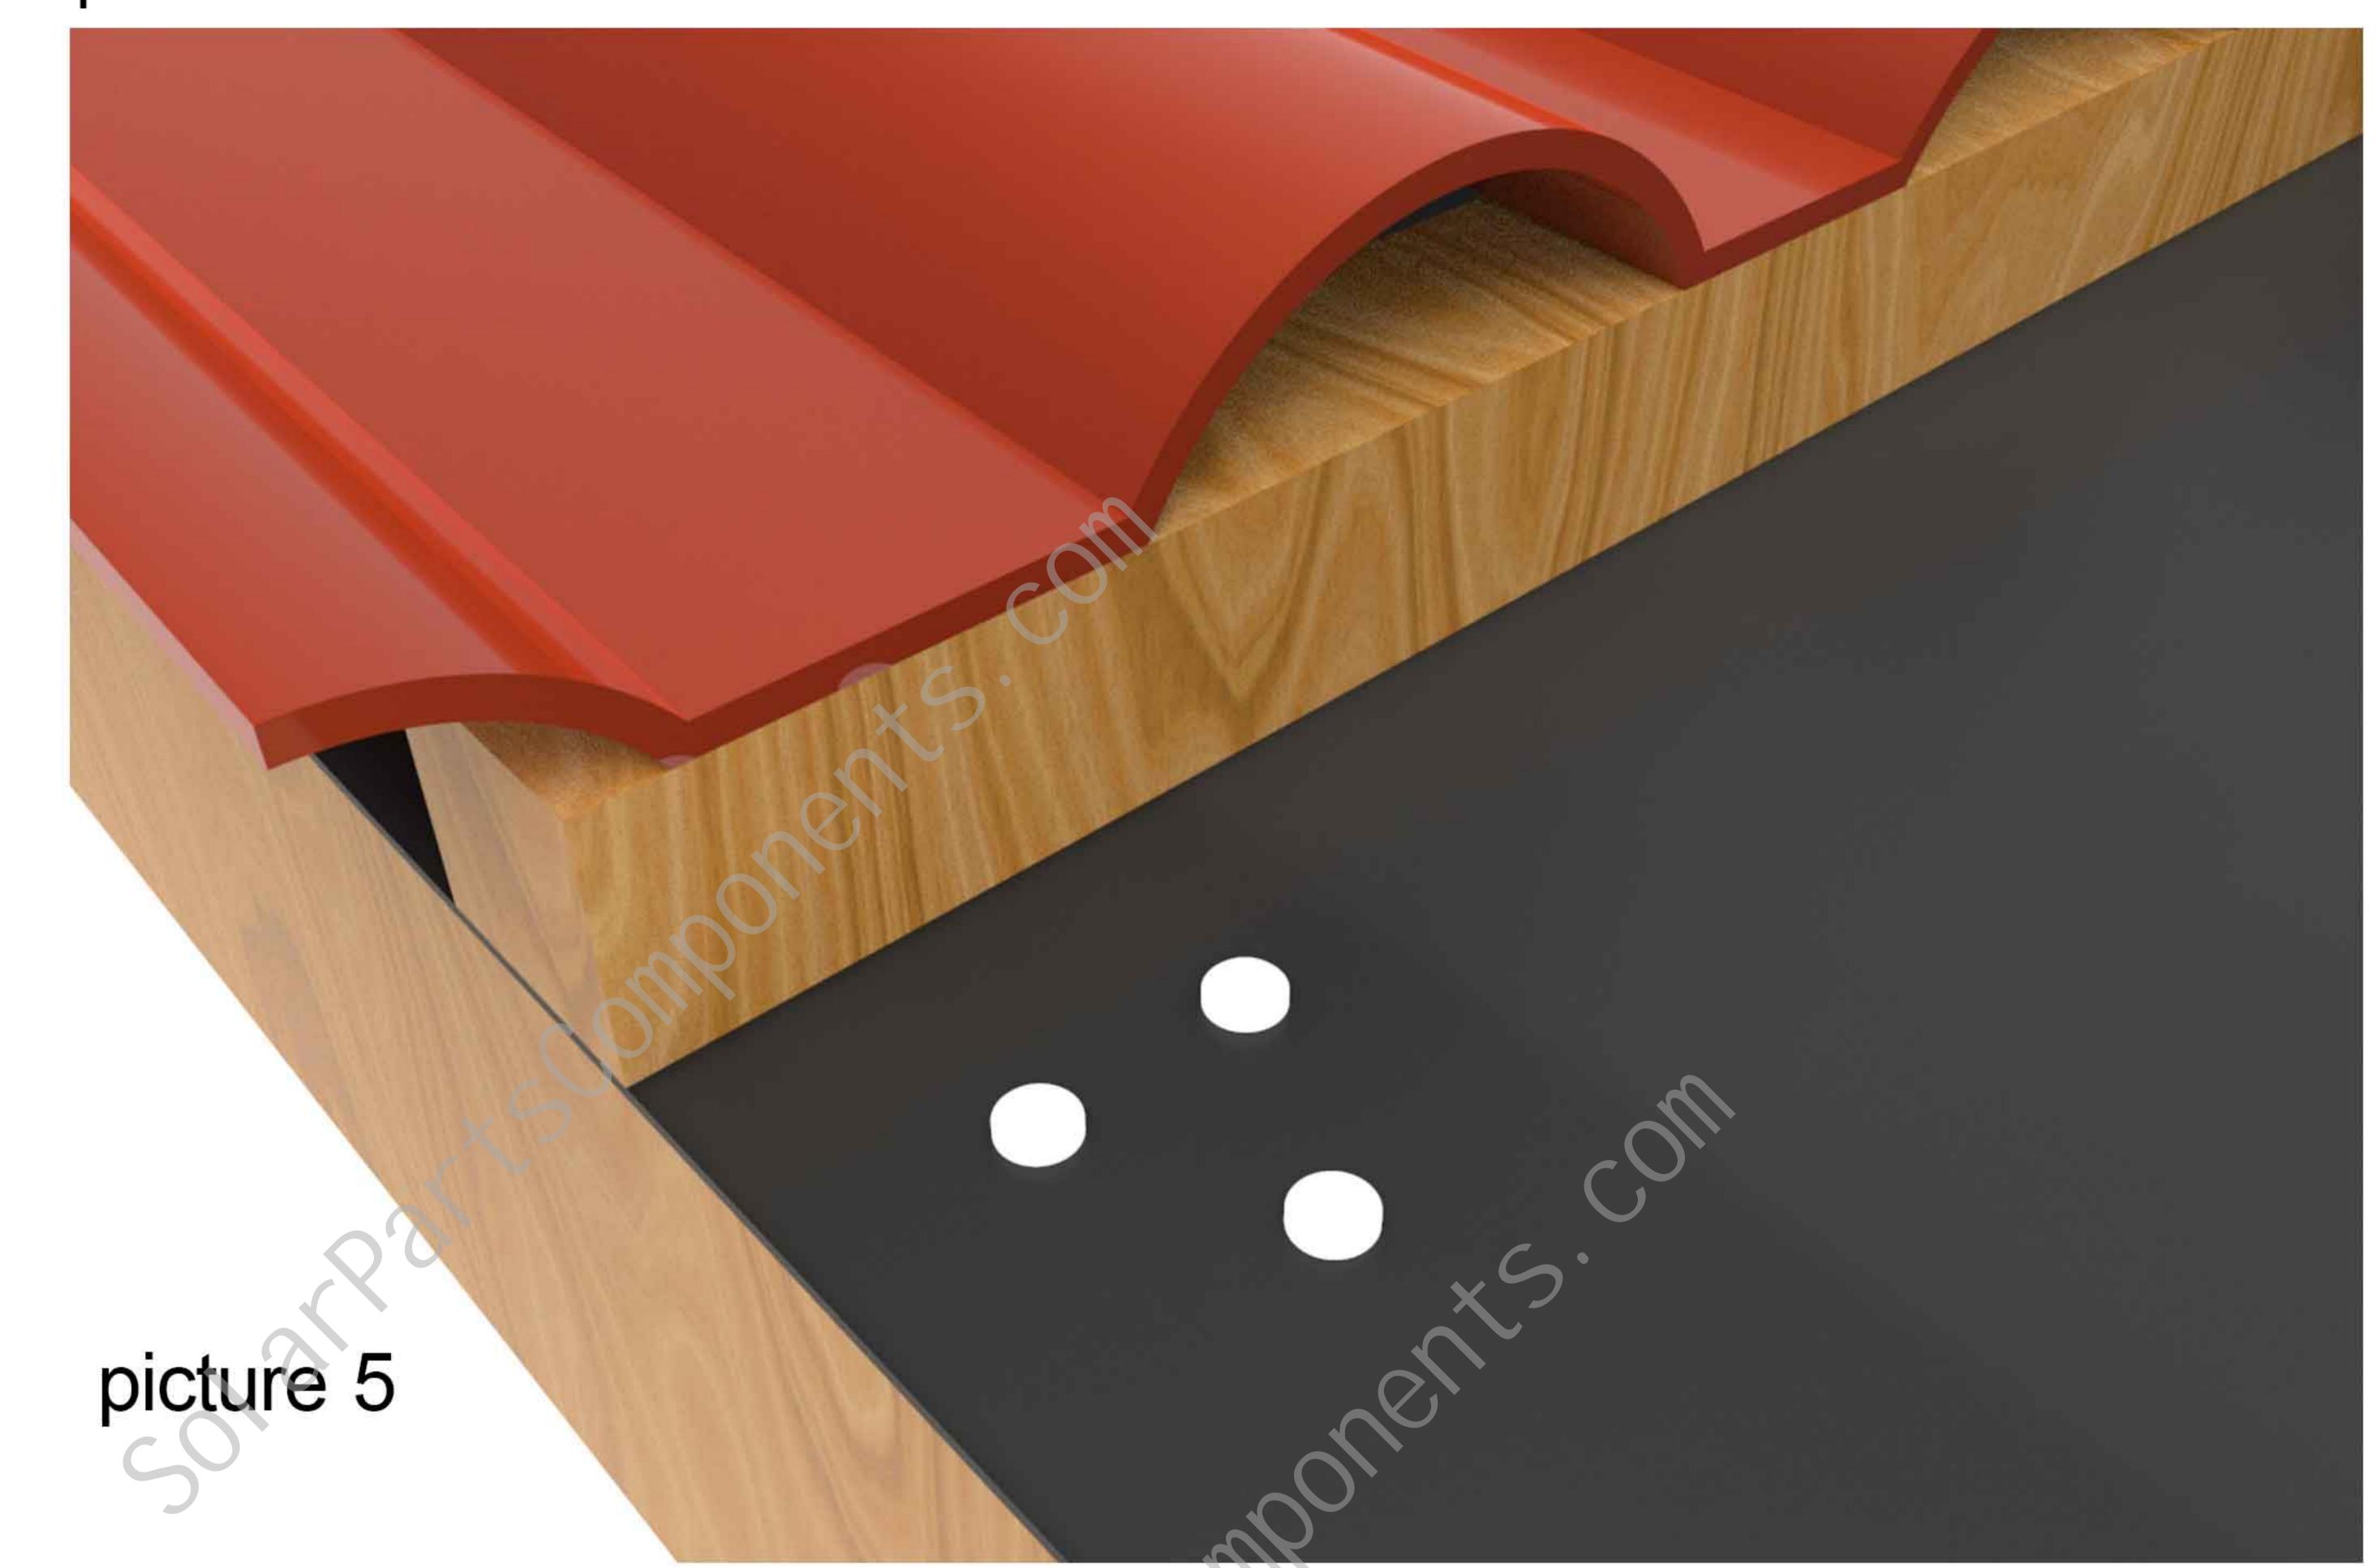

Step five, put the stainless-steel hook #05 on the main beam, align the holes with the drilled holes, and fix the hook on the main beam with wood screws, as picture 6 shows.




After fixing as picture 7 shows.

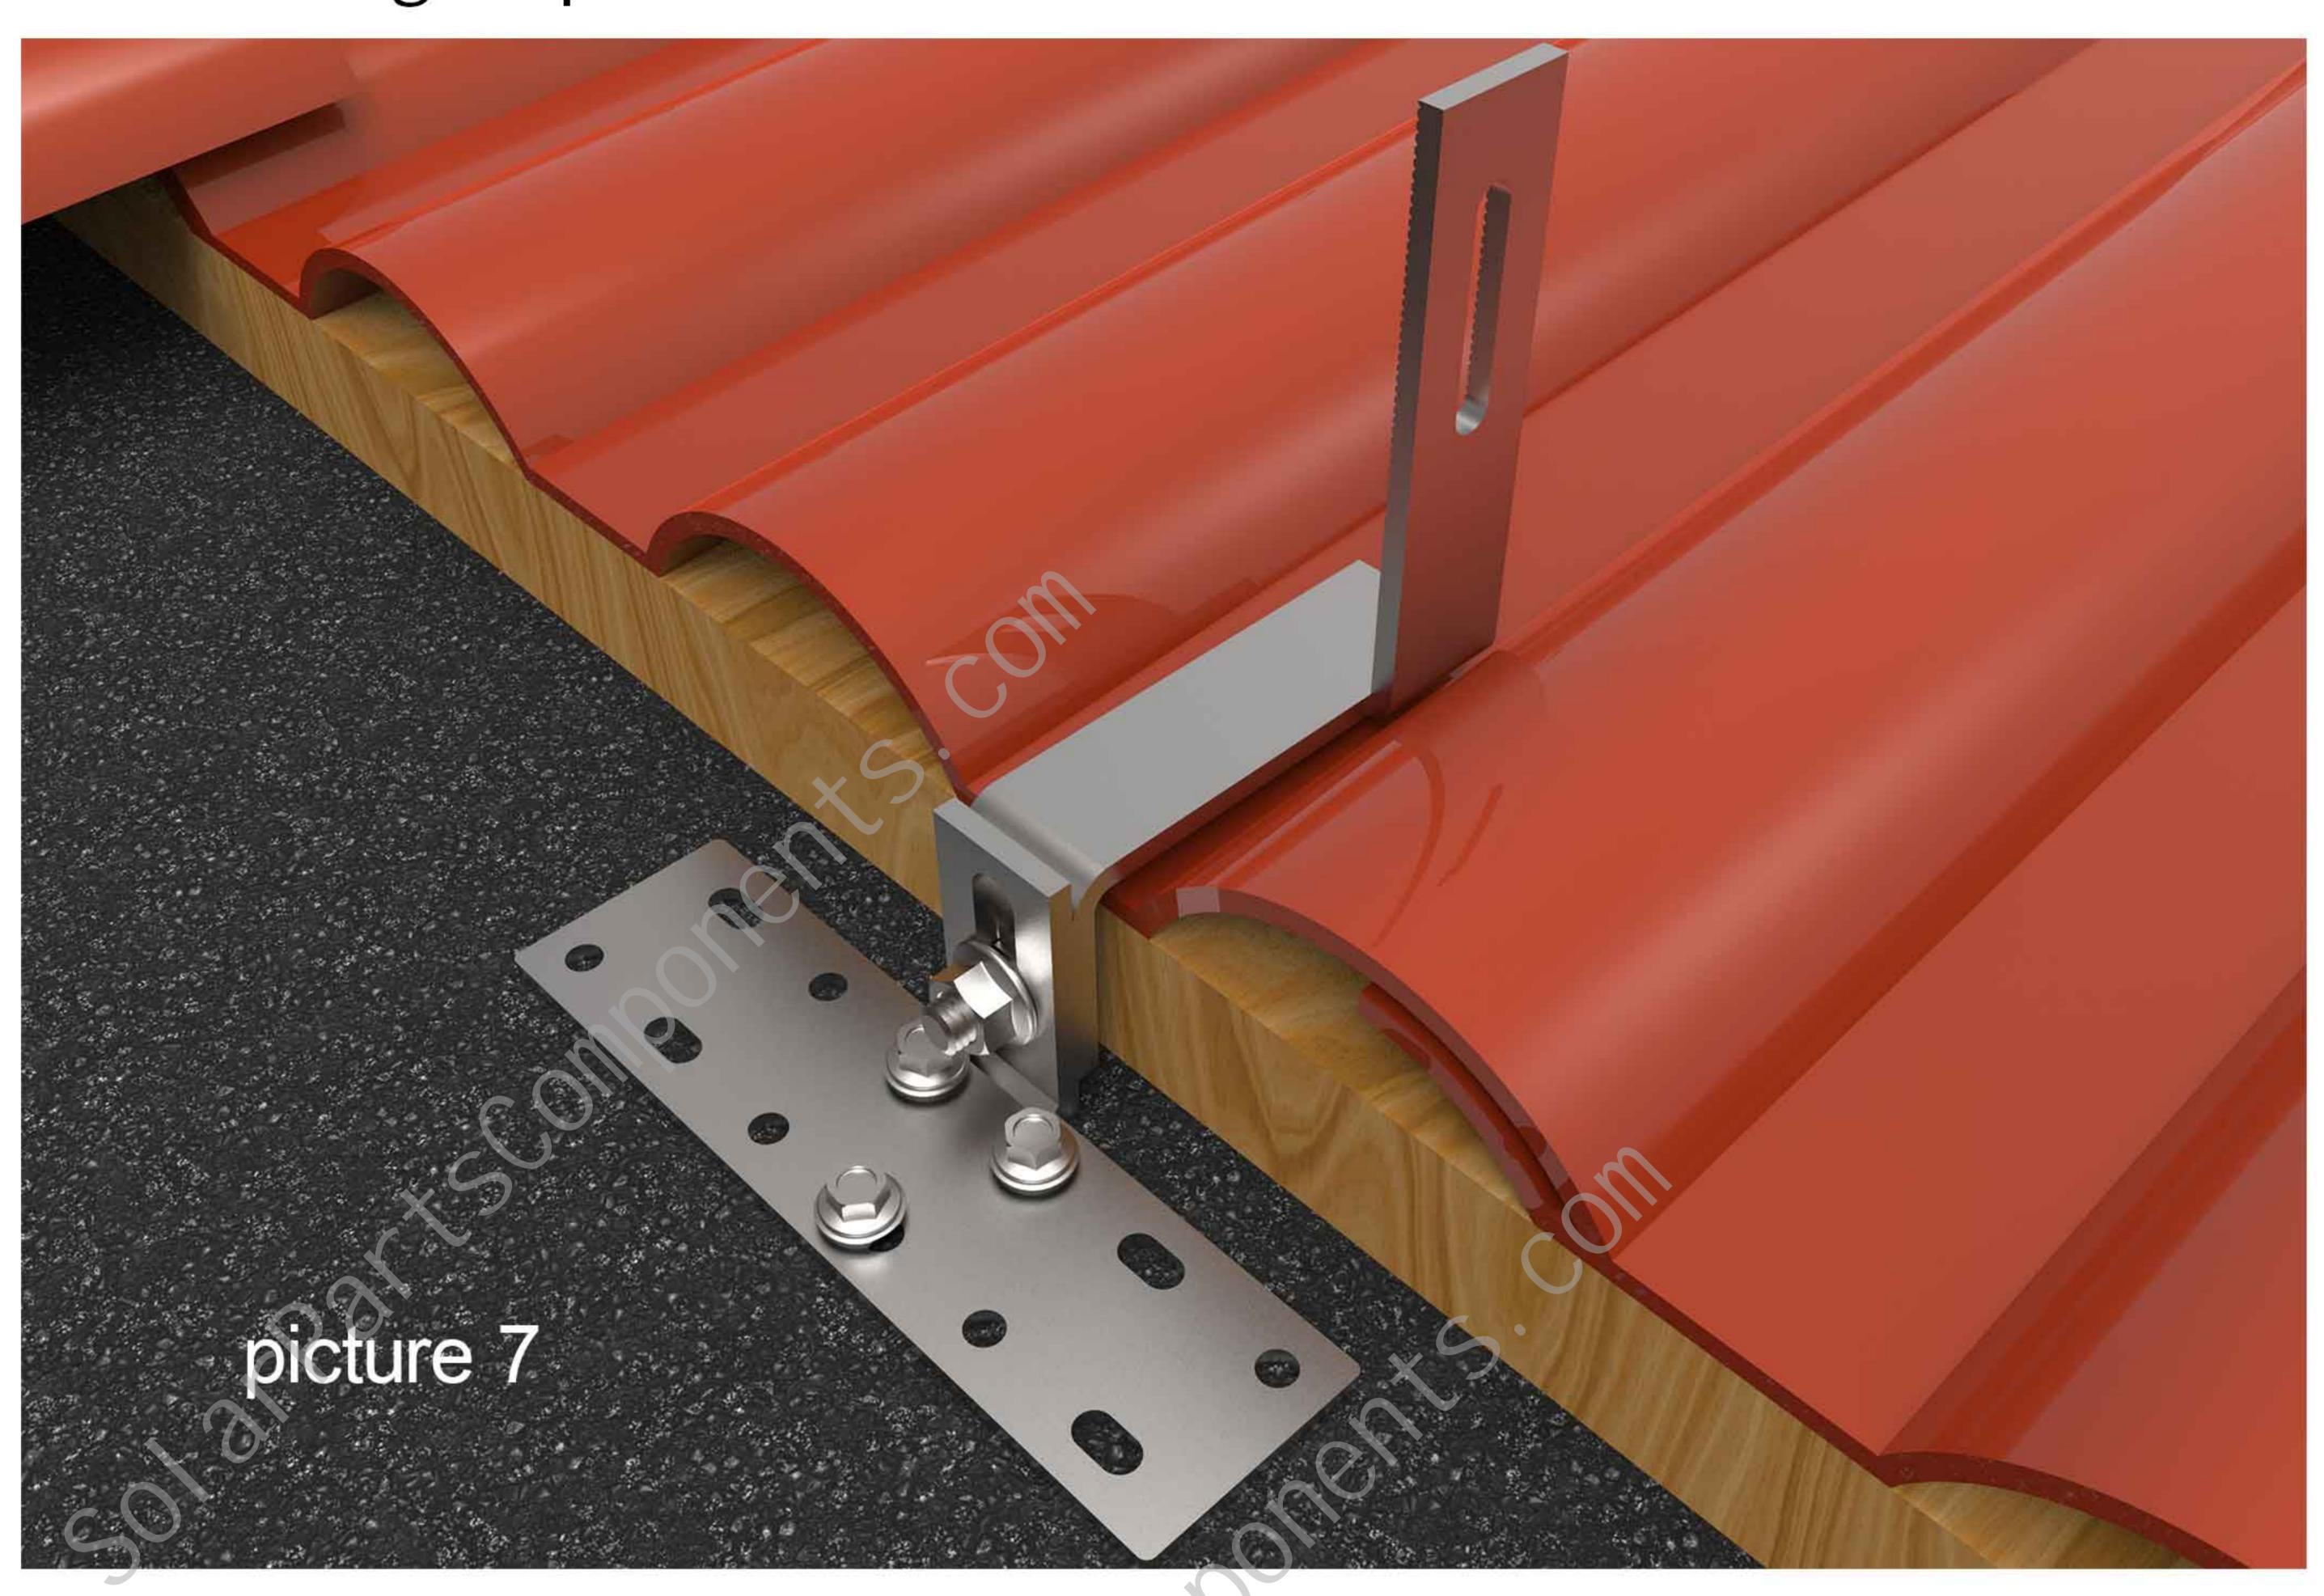

Step six , the effect after installing the stainless-steel hook # 05 and covering the tiles as picture 8 shows. The upper part of the stainless-steel hook # 05 is exposed outside the tiles.




Step seven, install the rail on the stainless-steel hook # 05 with M8\*25 bolts. as picture 9 shows

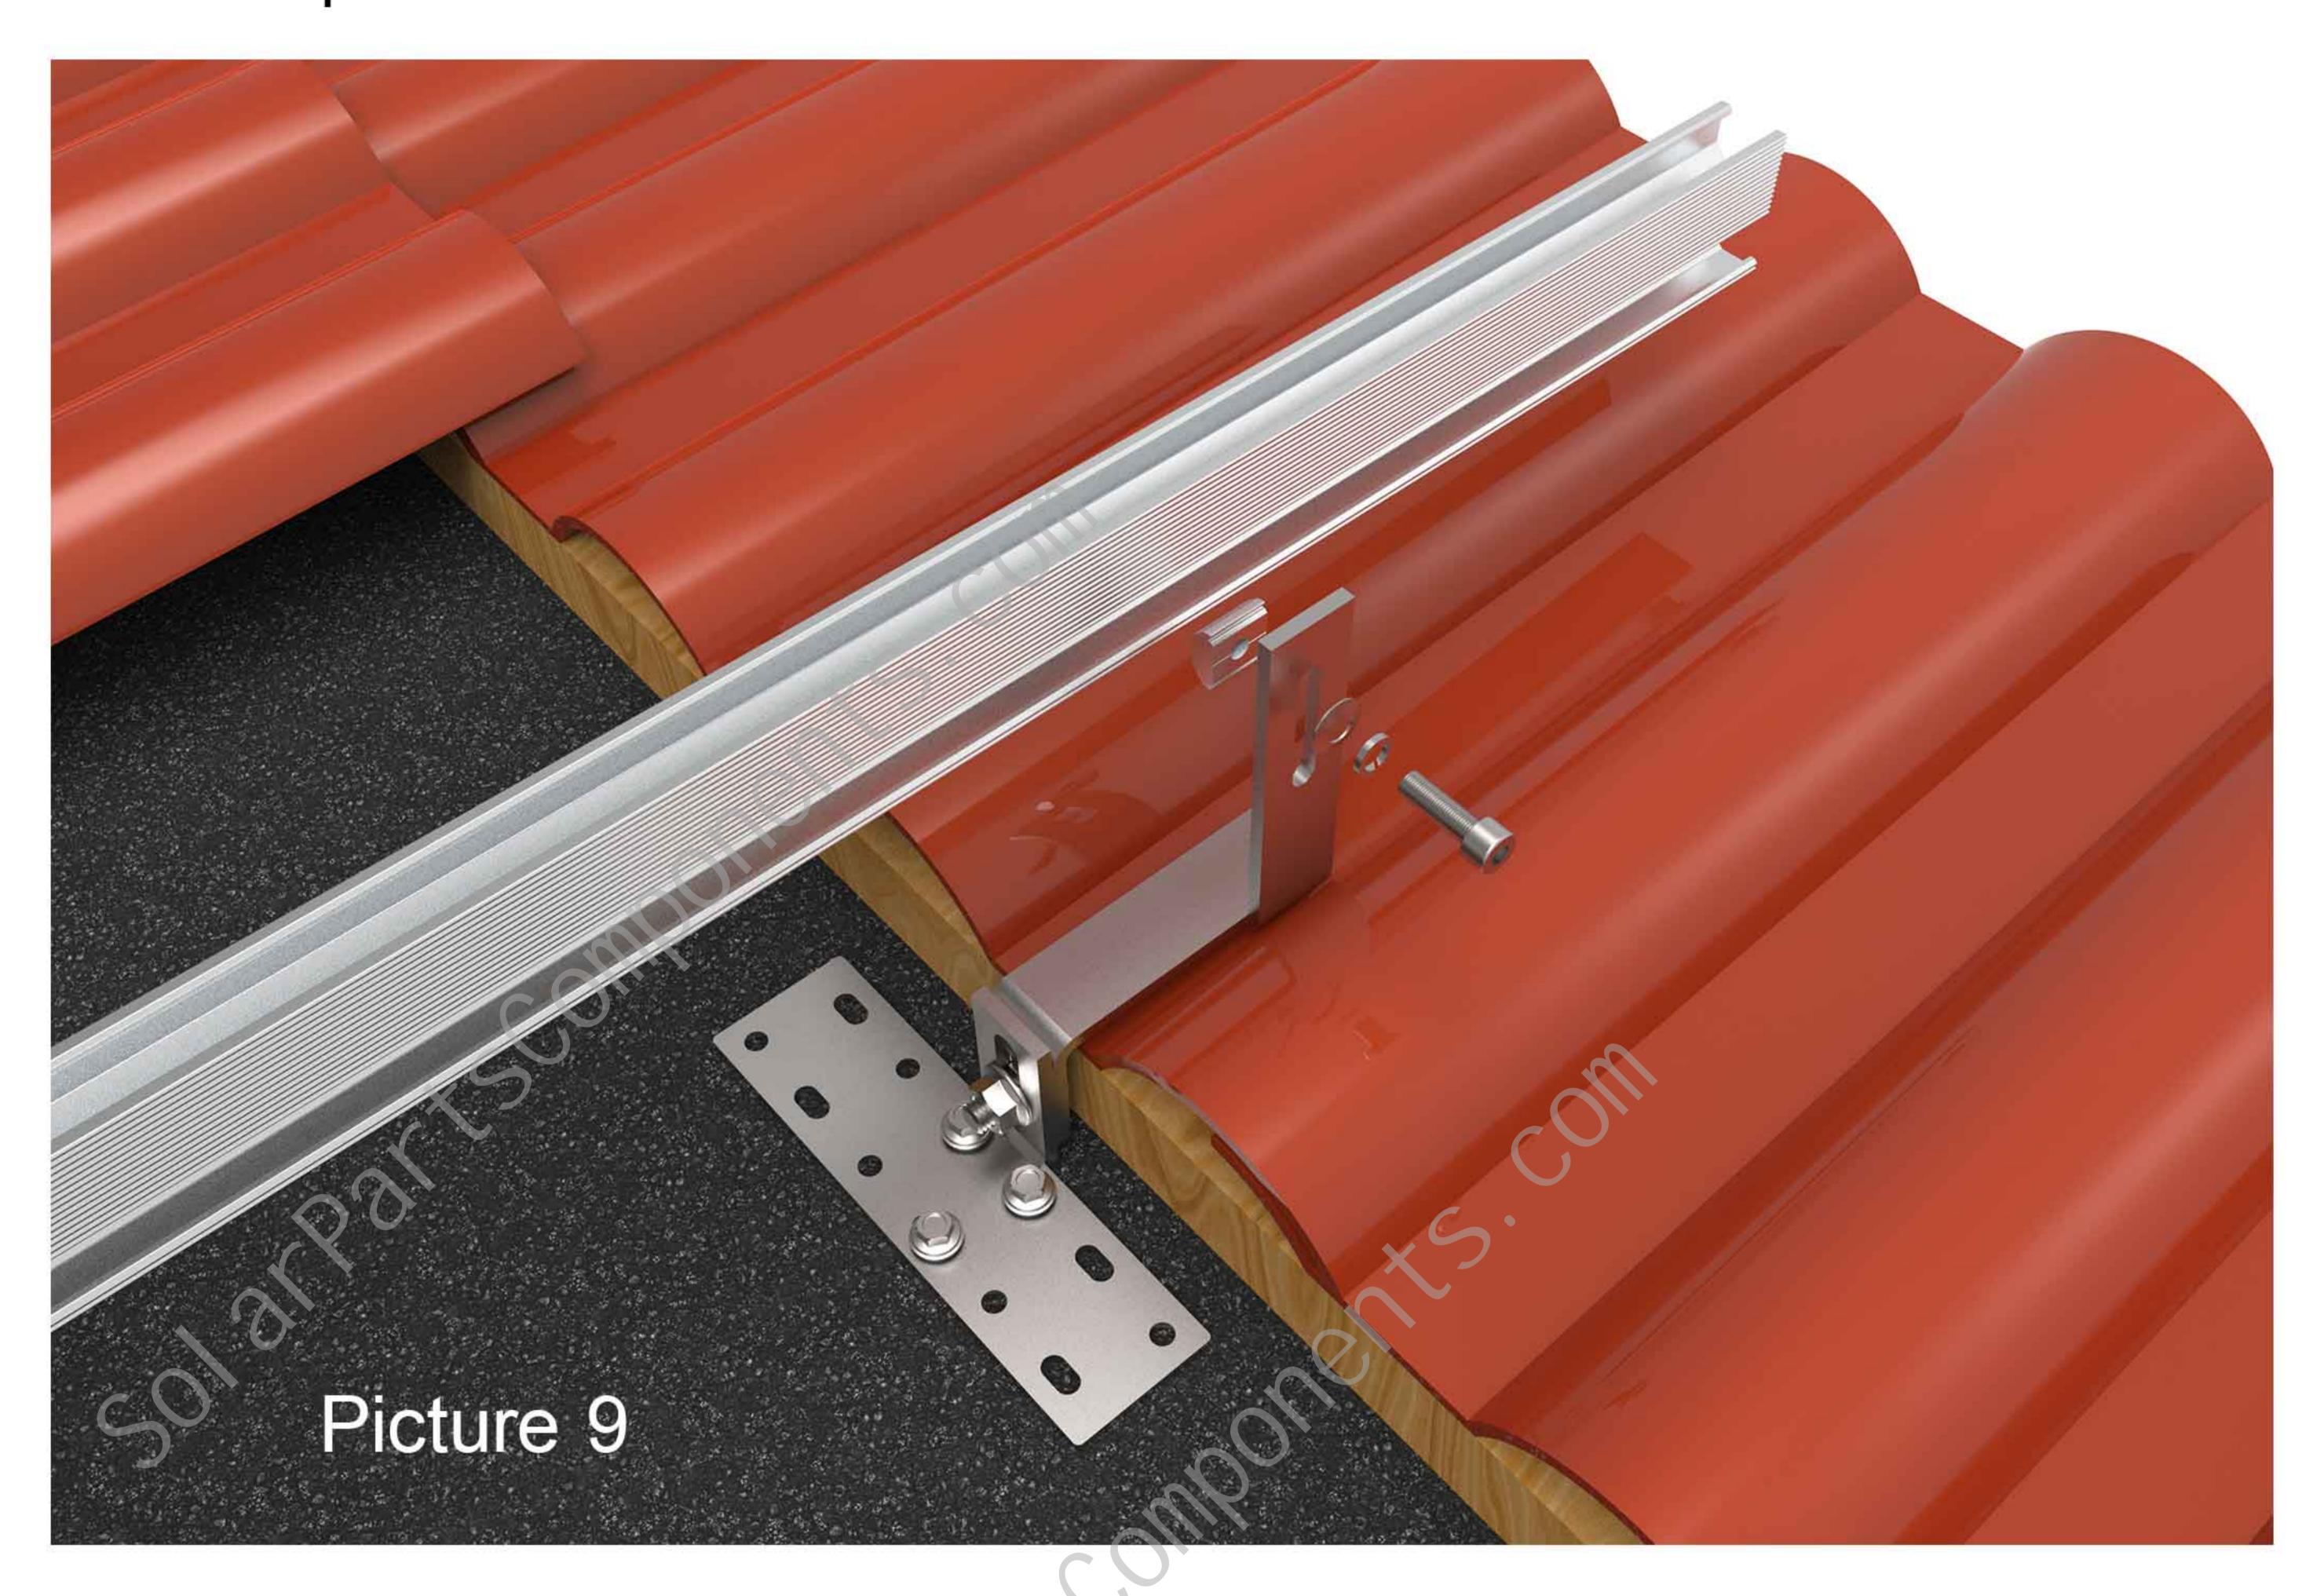

Step eight, effect after installation as picture 10 shows.



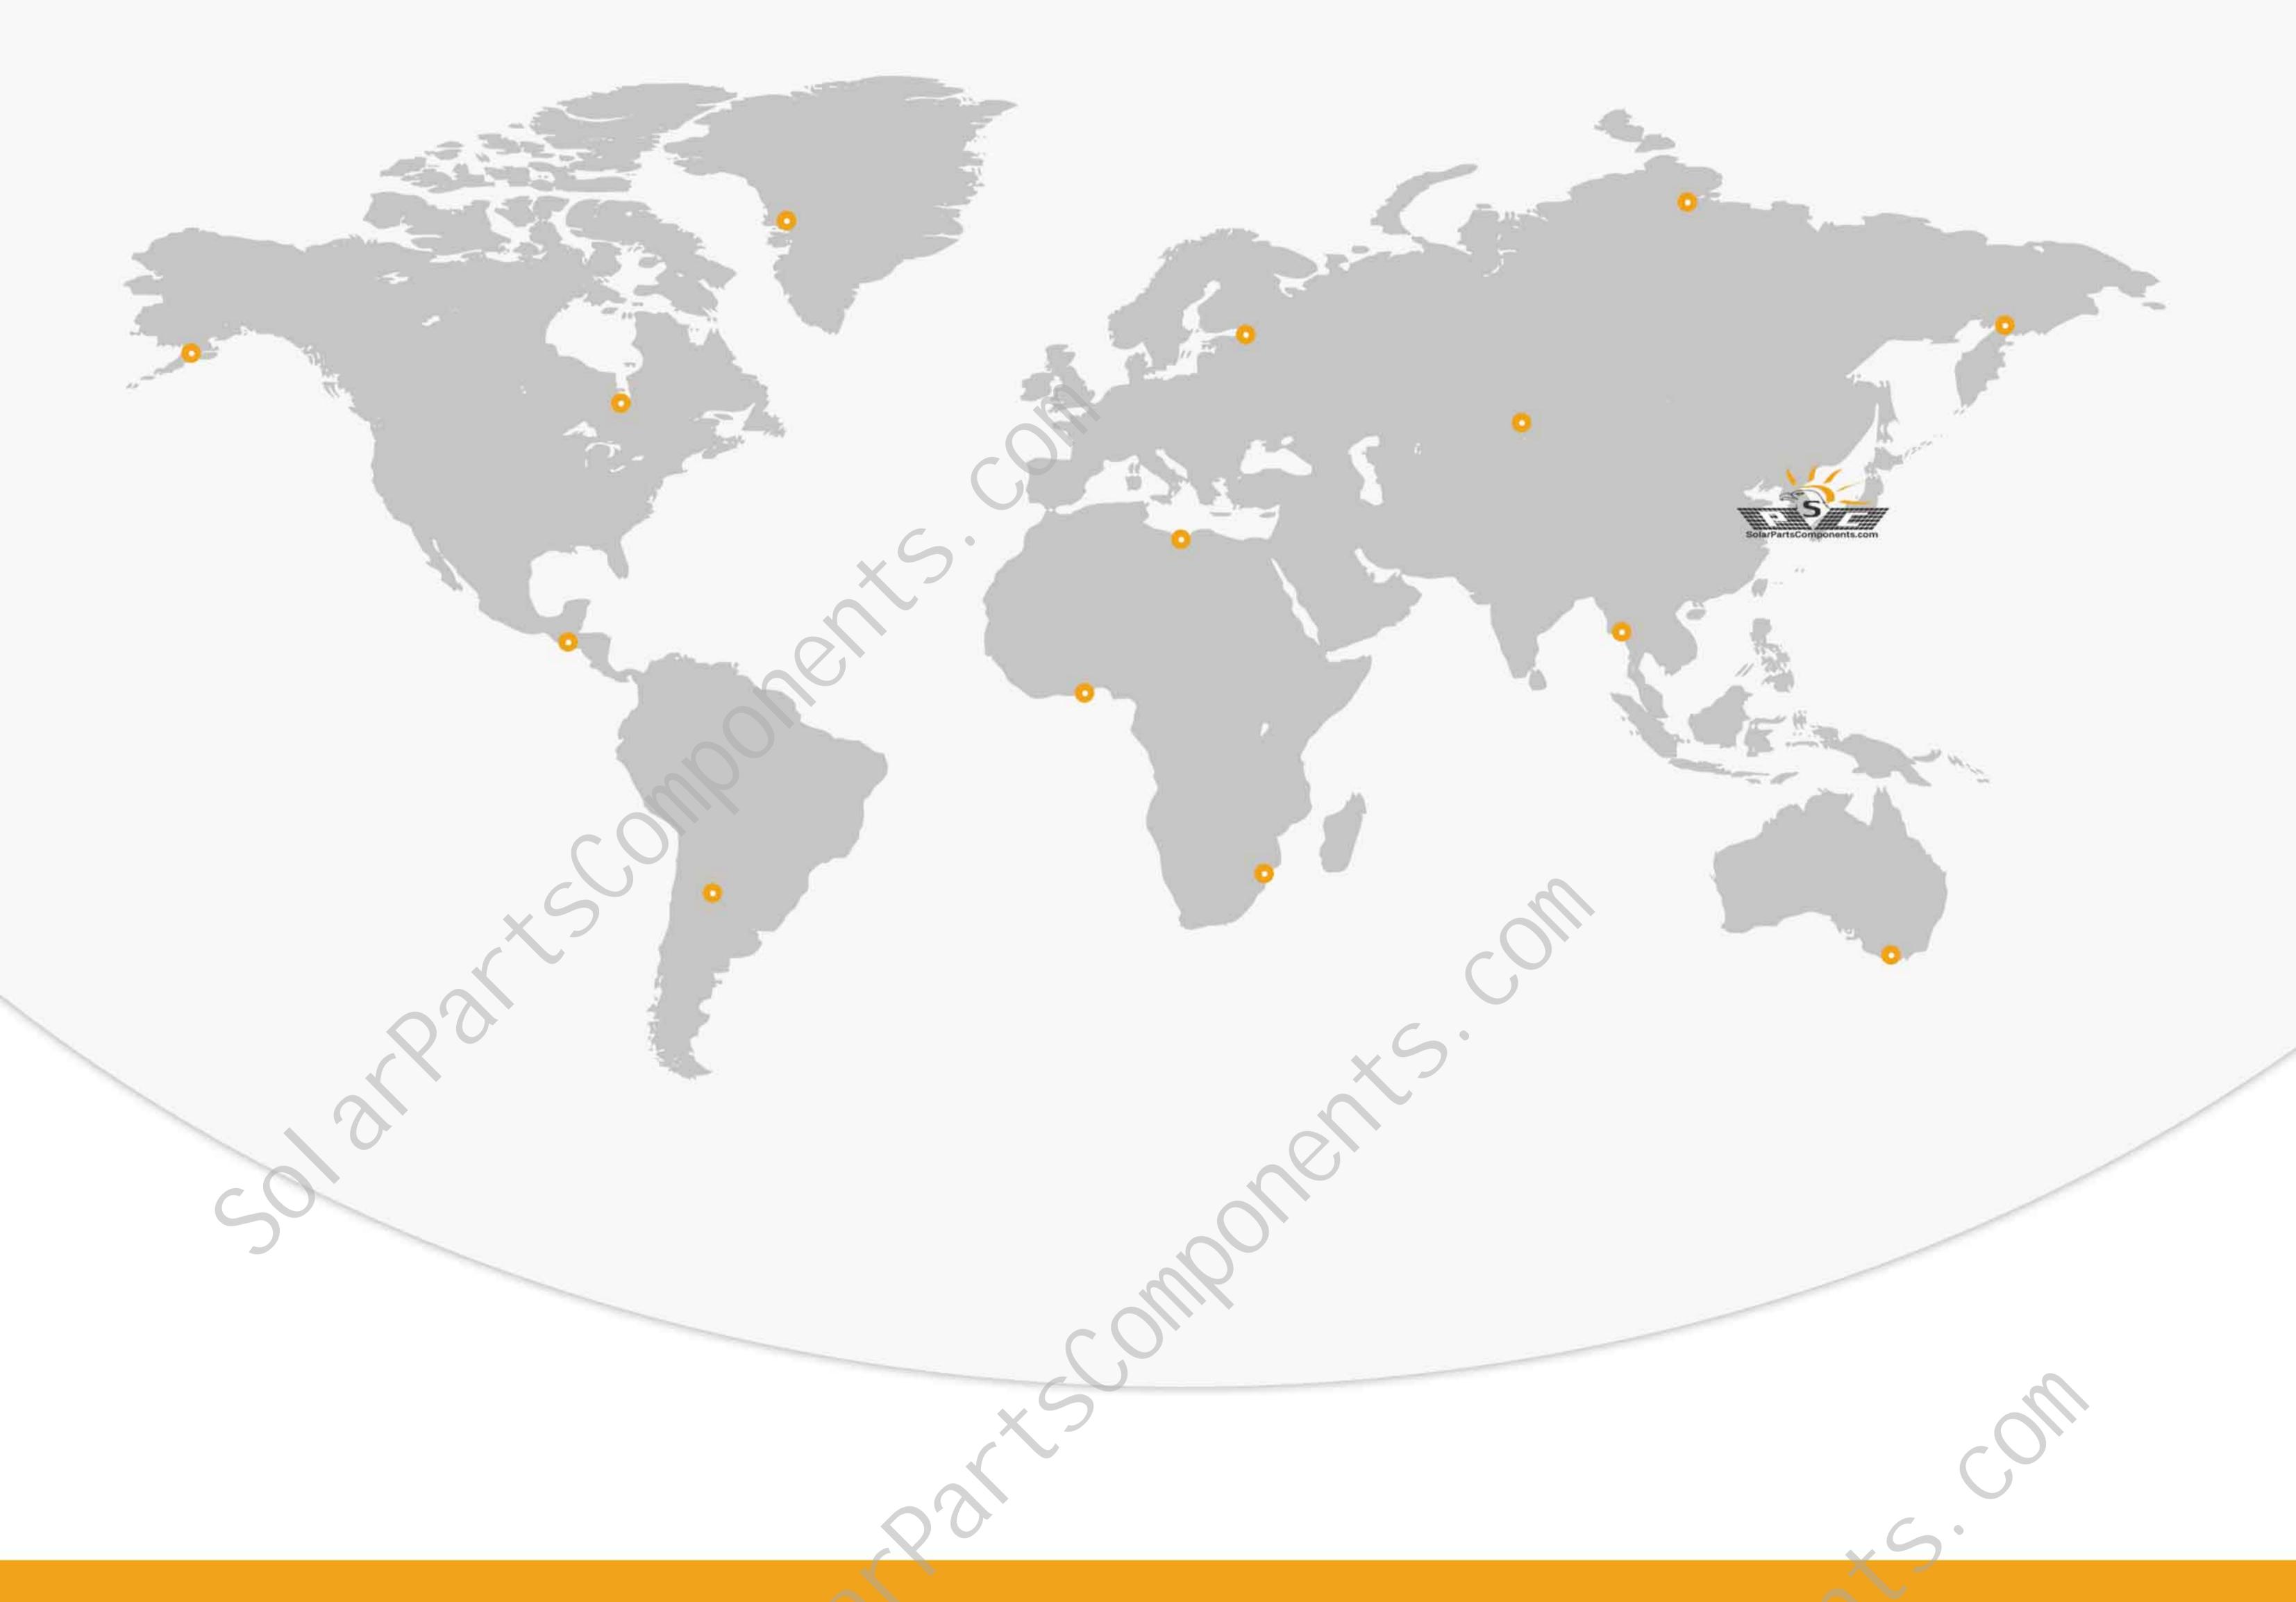

## Solar Mounting Parts & Components Factory







